Gour 1960 CESSNA

175

AND

Owner's Manual

Welcome to the ranks of Cessna owners! Your Cessna has been designed and constructed to give you the most in performance, economy, and comfort. You will find flying it, either for business or pleasure, a pleasant and profitable experience.

This Owner's Manual has been prepared as a guide to help you get the most pleasure and utility from your airplane. It contains information about your Cessna's equipment, operating procedures, and performance; and suggestions for its servicing and care. We urge you to read it from cover to cover, and to refer to it frequently.

Our interest in your flying pleasure has not ceased with your purchase of a Cessna. World-wide, the Cessna Dealer Organization backed by the Cessna Service Department stands ready to serve you. The following services are offered only by your Cessna Dealer:

1) FACTORY TRAINED MECHANICS to provide you with courteous expert service.


2) FACTORY APPROVED SERVICE EQUIPMENT to provide you with the most efficient and accurate workmanship possible.

3) A STOCK OF GENUINE CESSNA SERVICE PARTS on hand when you need them.

4) THE LATEST AUTHORITATIVE INFORMATION FOR SERVICING CESSNA AIRPLANES, since Cessna Dealers have all of the Service Manuals and Parts Catalogs, kept current by Service Letters and Service News Letters published by Cessna Aircraft Company.

We urge all Cessna owners to use the Cessna Dealer Organization to the fullest.

A current Cessna Dealer Directory accompanies your new airplane. The Directory is revised frequently, and a current copy can be obtained from your Cessna Dealer. Make your Directory one of your cross-country flight planning aids; a warm welcome awaits you at every Cessna Dealer.

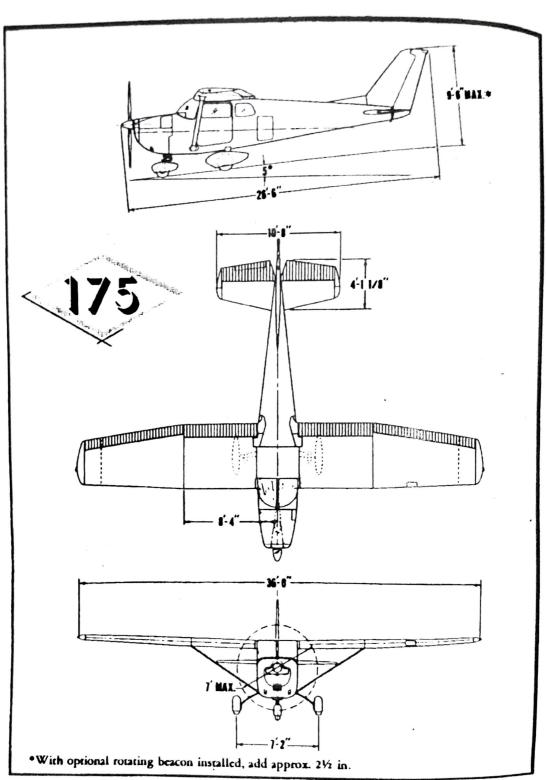


PRINCIPAL

DIMENSIONS

TABLE OF CONTENTS

		Page
SECTION I	— DESCRIPTION	. 1-1
SECTION II	- OPERATING CHECK LIST	. 2–1
SECTION III	— OPERATING DETAILS	. 3–1
SECTION IV	/ — OPERATING LIMITATIONS	. 4–1
SECTION V	- CARE OF THE AIRPLANE	. 5–1
SECTION V	I - OPERATIONAL DATA	6-1
ALPHABETI	ICAL INDEX Inde	ex-1

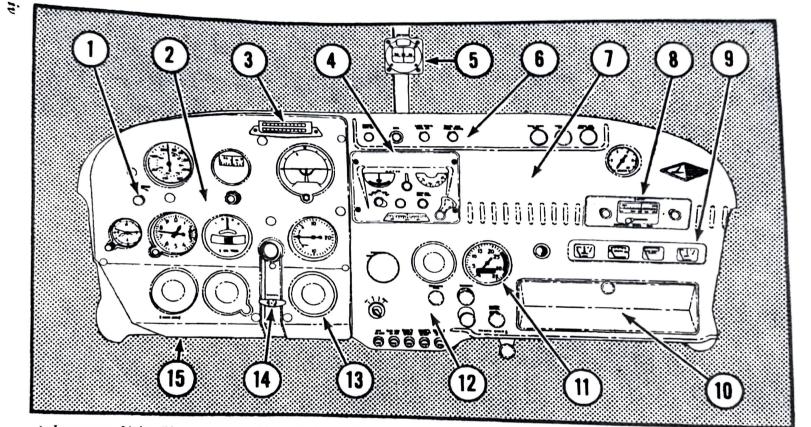

- 1. Instrument Lights Rheostat
- 2. Flight Instrument Group
- 3. Compass Correction Card
- 4. Optional Radio
- 5. Magnetic Compass

- 6. Upper Switch and Control Panel (Figure 2)
- 7. Optional Radio Space
- 8. Optional Radio
- 9. Fuel and Oil Instruments
- 10. Map Compartment

- 11. Tachometer
- 12. Lower Switch and Control Panel (Figure 3)
- 13. Optional Instrument Space
- 14. Starter Handle
- 15. Headphone Jack

Figure 1. Instrument Panel

ECTION

DESCRIPTION

ONE OF THE FIRST STEPS in obtaining the utmost performance, service, and flying enjoyment from your Cessna is to familiarize service, and controls. This yourself with your airplane's equipment, systems, and controls. This section will tell you where each item is located, how it operates and its function.

ENGINE.

The power plant used in the Cessna 175 and Skylark is a Continental Model GO-300-C geared, six-cylinder, horizontally-opposed engine developing 175 horsepower at 3200 RPM. It uses a wet-sump oil system, dual magnetos and an up-draft carburetor.

ENGINE CONTROLS.

THROTTLE.

The throttle (figure 3) is centrally located on the instrument panel and is easily identified by its large, round knob. Engine rpm can be increased by pushing the throttle in toward the instrument panel or decreased by pulling the throttle out.

NOTE

To prevent "creepage" of the throttle, a knurled friction-type lock nut is incorporated on the throttle to secure it at any desired setting. Clockwise rotation of the nut increases the friction on the

throttle and counter-clockwise rotation decreases the friction.

MIXTURE CONTROL KNOB.

The mixture control knob (figure 3) is located just below the tachometer and starter handle. A locking lever is incorporated on the control to prevent unintentional use of the mixture control knob. To lean the mixture, it is necessary to depress the locking lever while pulling the mixture control knob out. This operation can be accomplished with one hand by using the thumb to press the locking lever in and the index and middle fingers to pull the mixture control knob out. The locking lever is effective only in the leaning operation. Forward movement of the mixture control knob is not affected by the locking lever.

The mixture control knob is normally set at "full rich" (all the way in) for starting, take-off, and climb. Maximum performance take-offs from high elevation fields may be made with the mixture leaned for maximum en-

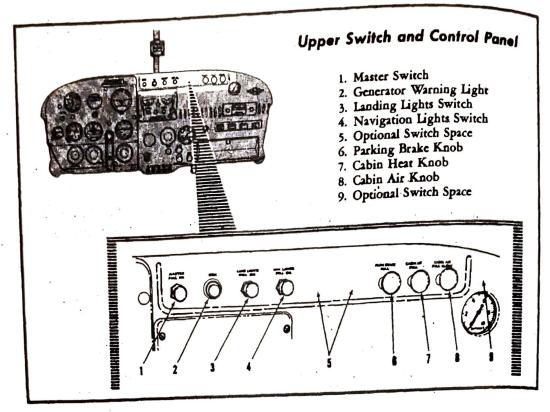


Figure 2.

gine rpm. However, 2 full rich mixture is preferred for better engine cooling.

CARBURETOR AIR HEAT KNOB.

The carburetor air heat knob (figure 3) is located slightly below and to the right of the throttle. The push-pull knob operates the carburetor air intake butterfly valve, which proportions the hot and cold air entering the carburetor. Pulling the knob out provides heated air for the carburetor while pushing the knob all the way in provides only cold air for the carburetor.

Air pulled into the heater muff and subsequently into the engine does not pass through the carburetor air filter. For this reason, when taxiing on dirty, dusty, or sandy fields, carburetor heat should not be used until the engine is cleared prior to take-off. After a full stop landing under these conditions, carburetor heat should be returned to full cold in order that the air filter becomes fully effective again.

Carburetor ice can form during ground operation with the engine idling. Therefore, just after the magneto check prior to take-off, pull the carburetor air heat knob "on" momentarily to check the operation of carburetor heat, and also to eliminate any ice forming in the carburetor. After this short check, be sure to move the carburetor air heat knob to the "cold air" position. This gives maximum

power for the take-off. Watch the engine for any indications of ice (roughness or loss of rpm) during (limb and apply full carburetor heat if the engine begins to ice.

The correct way to use carburetor heat is to first use full heat to remove any ice that is forming. By trial and error, determine the minimum amount

of heat required to prevent the ice from forming; each time removing any ice that is formed by applying full heat. On each subsequent trial, increase the amount of heat applied until no ice forms. Ample carburetor heat has been provided in your airplane to assure positive ice elimination. When full carburetor heat is

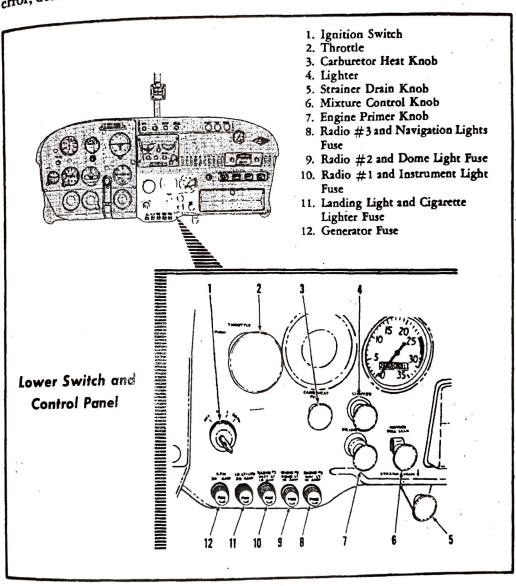


Figure 3.

applied at cruising power, rough engine operation will result. To avoid initial rough operation during letdowns, reduce power partially before applying carburetor heat, apply heat, then reduce power to the letdown setting.

When full carburetor heat is applied, the engine will lose up to 350 rpm in cruising flight. In addition to the rpm loss, the engine will run rough due to too rich a mixture. Therefore, it may be necessary to lean the mixture whenever full carburetor heat is used in cruising flight. Excessively-lean fuel-air mixture will cause overheating and possibly detonation. Do not lean the mixture unless an increase in engine rpm results.

Refer to Cold Weather Operation, page 3-7, for carburetor heat procedures in sub-zero weather.

IGNITION SWITCH.

The ignition switch (figure 3) is located just below the throttle. This switch is key operated and controls the dual magneto ignition systems. There are four switch positions designated clockwise as follows: "OFF", "R", "L", and "BOTH". The engine should normally be operated on both magnetos ("BOTH" position). The "R" and "L" positions are for checking purposes only.

ENGINE PRIMER KNOB.

The manual plunger-type engine primer delivers an initial charge of raw fuel to the cylinders, for easier starting. For an initial start in normal air temperatures, use two strokes of the primer. Usually, a hot engine will need no priming.

To operate the primer, proceed a

- (a) First, unlock the plunger by rotating the knob in either direction until the knob pops pan way out.
- (b) Slowly pull the plunger all the way out and then push the plunger all the way in. This action is termed "one stroke of the primer."
- (c) Normal winter weather will require two to four strokes of the primer, and very cold (-30° F.) weather may require ten scrokes.
- (d) Normally, the engine is started immediately after the priming operation. In very cold weather, it is recommended that the engine be turned over while priming. It may be necessary to continue priming until the engine runs smoothly.

The standard primer injects fuel into the intake piping. An optional six-cylinder priming system injects fuel directly into the intake valve chamber of each cylinder, for quicker starting in extremely cold weather. The priming procedure is identical with either system.

STARTER HANDLE.

The T-shaped starter handle (figure 3) engages the starter drive and closes

the starter motor switch. To start the engine, pull out the starter handle, hold it until the engine begins firing, then release it. If the engine stops firing during the start, wait until both the engine and the starter motor have stopped turning, before engaging the starter again.

OIL SYSTEM.

OIL LEVEL.

The normal capacity of the engine oil sump is 10 quarts and the minimum is 6 quarts. The oil level may be checked and oil added by opening the access door in the left cowl. The dipstick is located just below and to the left of the oil filler cap. When replacing the dipstick and filler cap, make sure the dipstick is seated firmly and the filler cap is turned clockwise as far as it will go.

To get a correct oil level reading, shut down the engine for 5 to 10 minutes before checking, to permit the oil to drain down from the engine into the sump. Always add oil if the level is below 6 quarts and fill the sump if you plan a long flight.

OIL SPECIFICATION AND GRADE.

Use only aviation grade engine oil and change it every 25 operating hours. Use the grades given in the following table:

NOTE

Run the engine before draining the oil. Hot oil will drain more readily and dirt and deposits will be in suspension.

Average Outside Temperature	Recommended Oil Grade
Below 40°F	SAE 20
Above 40°F	SAE 40

OIL TEMPERATURE GAGE.

A capillary type oil temperature gage (figure 1) is mounted within the row of oil and fuel instruments on the right side of the instrument panel. A green arc on the gage dial indicates the normal operating range of oil temperatures. Refer to Section IV for instrument markings.

OIL PRESSURE GAGE.

An oil pressure gage (figure 1) is mounted within the row of oil and fuel instruments on the right side of the instrument panel. The gage is calibrated in pounds per square inch. Refer to Section IV for instrument markings.

AIR INDUCTION SYSTEM.

Air is ducted to the carburetor from an air scoop located on the bottom of the engine cowl. Dirt and other foreign matter is filtered from the incoming air by a filter screen located in the air scoop. Proper cleaning and servicing of this air filter is important to increase life and maintain top efficiency of the engine. The filter should be serviced every 25 hours (during the regular oil change) or more often when operating in dusty conditions. Under extremely dusty conditions, daily maintenance of the air filter is recommended. Refer to the servicing instruc-

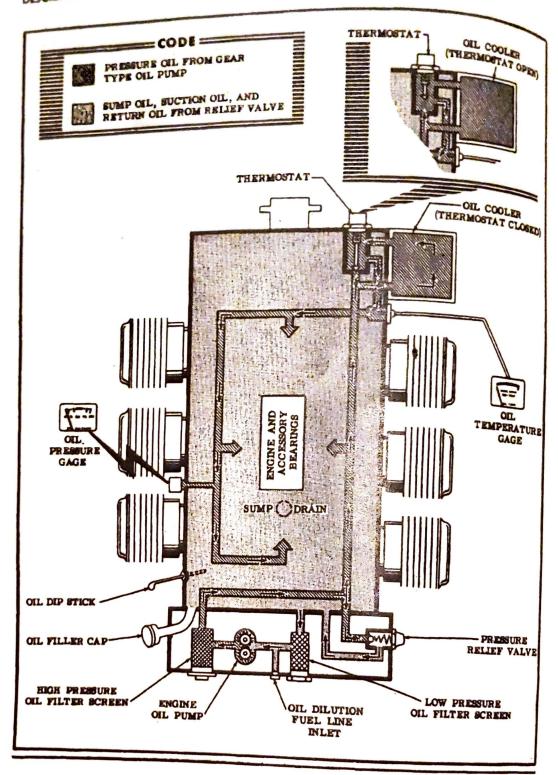


Figure 4. Oil System Schematic

tions stamped on the carburetor air filter for the procedure to be used.

CARBURETOR AIR TEMPERATURE GAGE.

The optional Richter carburetor air temperature system indicates the temperature of the air inside the carburetor, near the throttle butterfly.

The gage will reflect the fluctuations in internal carburetor temperatures which occur with changes in throttle and mixture settings and carburetor heat application. Without carburetor heat, it normally will read below outside air temperature, while the application of heat may bring it considerably above OAT.

The Richter carburetor air temperature system may be used as an aid in applying carburetor heat accurately, avoiding unnecessary power losses due to higher induction air temperatures and loss of ram air pressure. There are many combinations of temperature, humidity and power settings which can cause ice in the carburetor. These combinations vary so much that a specific range of temperatures cannot be defined as an icing range. However, with experience it is possible to determine the approximate limits of a potential icing range for a particular aircraft, when operating in possible icing conditions.

FUEL SYSTEM.


Fuel is supplied to the engine from two 26-gallon aluminum tanks, one in each wing. From the tanks, fuel flows by gravity through a selector valve and a strainer to the carburetor. Fuel usable in all flight attitudes is 21 gallons from each tank.

FUEL SPECIFICATION AND GRADE.

Aviation grade fuel should always be used except under emergency conditions. The recommended fuel is 80 octane rating. Highly leaded fuels are not recommended. Filling the fuel tanks immediately after flight will reduce the air space and minimize the moisture condensation in the fuel tanks.

FUEL SELECTOR VALVE.

A rotary type fuel selector valve is located at the aft end of the cabin floor tunnel between the front seats. The valve has four positions labeled "BOTH OFF", "LEFT TANK", "RIGHT TANK", and "BOTH ON". The "BOTH OFF" position seals both wing tanks off from the rest of the

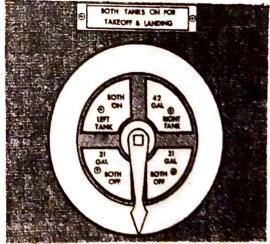

fuel system and allows no fuel to pass beyond the selector valve. The "LEFT TANK" position allows fuel to flow from the left wing tank to the engine.

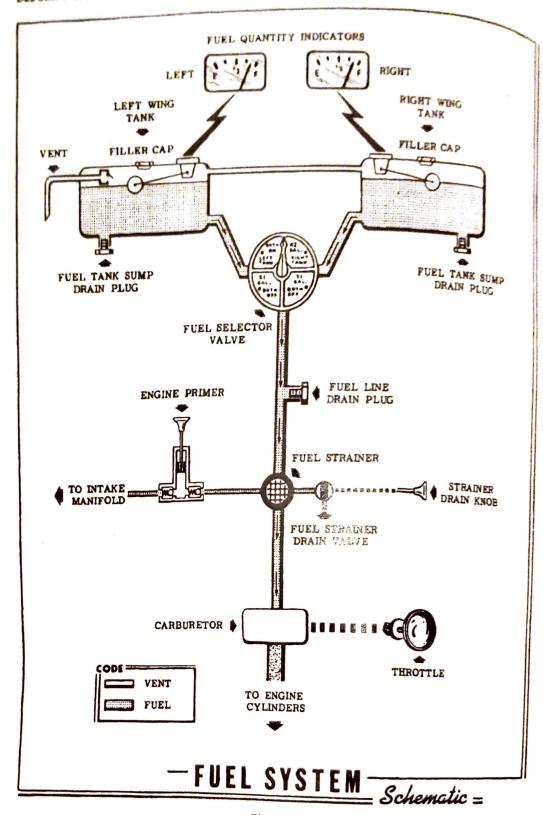


Figure 5.

The "RIGHT TANK" position permits fuel to flow from the right wing tank to the engine. The "BOTH ON" position provides fuel flow from both tanks simultaneously to provide maximum safety.

NOTE

The fuel selector valve handle indicates the setting of the valve by its position above the dial.

FUEL STRAINER DRAIN KNOB.

The fuel strainer drain knob (figure 3) provides a quick, convenient method of draining water and sediment which may have collected in the fuel strainer.

Two ounces of fuel (about 3 or 4 seconds of drain knob operation) should be drained from the strainer before the first flight each day or after each refueling. The spring-loaded drain valve in the strainer opens when the strainer drain knob is pulled out all the way. When the knob is released, the valve closes.

FUEL TANK SUMP DRAIN PLUGS.

A fuel tank sump drain plug is located on the underside of each wing in line with the rear edge of the cabin door and out a few inches from the fuselage. These plugs are used to drain any sediment or water that may collect in the fuel tanks. Draining the tank sumps is normally required only at each 100 hour inspection period.

FUEL LINE DRAIN PLUG.

A fuel line drain plug is located on the underside of the airplane directly

below the fuel tank selector valve. At each 100 hour inspection period, this plug should be removed to drain any sediment or water that might have accumulated in the fuel line.

FUEL QUANTITY INDICATORS

Electrically-operated fuel quantity indicators (figure 1) are mounted within the row of fuel and oil instruments on the right side of the instrument panel.

NOTE

After the master switch is turned on, a warming period is required before the indicator needles will arrive at the actual reading. Also, the needles will require several seconds to readjust themselves to the actual reading after any abrupt change in flight attitude of the airplane.

The indicators, identified "LEFT" and "RIGHT" indicate the amount of fuel remaining in their respective tanks. A red arc extending from the empty to ¼ full range on each indicator dial warns the pilot that the respective tank is ¼ full or less. Do not take off if the pointer is in the red arc.

ELECTRICAL SYSTEM.

Electrical energy is supplied by a 12-volt, direct-current system powered by an engine-driven generator. A 12-volt storage battery serves as a stand-by power source, supplying current to the system when the generator is inoperative, or when the generator

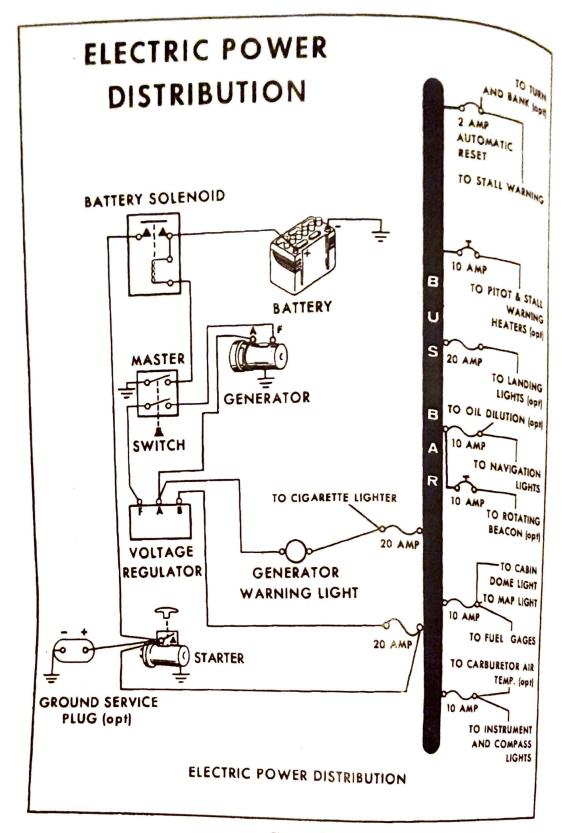


Figure 6.

voltage is insufficient to close the reverse-current relay.

MASTER SWITCH.

The master switch (figure 2) is the extreme left switch on the upper switch and control panel. Switch positions are "ON" (out position) and "OFF" (in position). When the master switch is turned "ON", a solenoid switch is energized and the electrical power of the battery is admitted into the electrical system. In event of a short or malfunctioning of the airplane electrical system, the master switch may be turned off and the engine will continue to run on the magneto ignition system.

FUSES.

Fuses are provided to protect the majority of electrical circuits in your airplane. These fuses are located on the extreme lower portion of the lower switch and control panel. The fuse circuit and fuse capacity are indicated above the respective fuse retainers. Fuses may be removed by pressing the fuse retainers inward and rotating them counterclockwise until they pop part way out. The faulty fuse may be lifted out and replaced. Spare fuses are located in a clip on the inside of the glove compartment door. The stall warning indicator circuit, optional turn and bank indicator circuit, and optional flare circuit are protected by an automatically resetting circuit breaker which provides intermittent emergency operation of these devices in case of a faulty circuit.

GENERATOR WARNING LIGHT.

A generator warning light (figure 2) is located just to the right of the master switch and is labeled "GEN". This red warning light is an indication of generator output. The light will remain off at all times when the generator is functioning properly. The light will not show drainage on the battery. It will illuminate when the battery or external power is turned on prior to starting the engine or when there is insufficient engine RPM to produce generator current.

FLIGHT CONTROL SYSTEM.


Conventional wheel and rudder pedal controls are provided to operate the primary flight control surfaces (ailerons, rudder, and elevators). The elevator trim tab, located on the right elevator, is mechanically operated from the front seats. The rudder trim tab is adjustable on the ground only.

CONTROLS LOCK.

A controls lock, standard equipment on the 175, locks the elevators and ailerons in neutral to protect them from buffeting in high winds or prop wash. The lock has a large red metal flag which covers the ignition switch, to remind you that the controls must be unlocked before starting the engine.

NOTE

The controls lock is designed for use in moderately-gusty winds up to 30 or 40 MPH. When storm conditions are forecast, additional precautions should be taken.

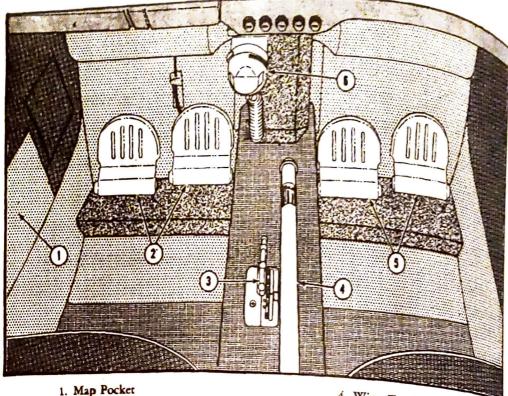

- 2. Pilor's Rudder Pedals
- 3. Elevator Tab Control Wheel

6. Microphone

4. Wing Flap Handle 5. Copilor's Rudder Pedals

(Opt. Equip.)

Figure 7. Lower Forward Section of Cabin

To install the controls lock, pull the control wheel back until the hole in the control wheel shaft is aligned with the hole in the collar assembly mounted on the instrument panel. Position the controls lock on the right side of the control wheel shaft adjacent to the instrument panel so that the lettering on the red flag is legible. Insert the short shaft of the controls lock down through the holes in the collar assembly and control wheel shaft. Check that the controls lock is fully inserted.

To remove the controls lock, pull it up and out of the collar assembly and control wheel shaft.

When not in use, the controls lock may be stored in the glove companment.

WING FLAP HANDLE.

The wing flaps are controlled by a wing-flap handle (figure 7) mounted between the two front seats. The handle is operated by depressing the thumb button and moving the handle to the desired flap setting. By releasing the thumb button, the handle can be locked to provide 0, 10, 20, 30, and 40-degree flap positions.

The flaps may be lowered or raised during normal flying whenever the

airspeed is less than 100 mph. The saps supply added lift and considerable drag; the resulting action steepable drag; the resulting action steepable drag; the pilot to bring the airplane enabling the pilot to bring the airplane in over an obstruction and land shorter than could be done without staps. The use of slaps is not recommended for cross-wind take-offs.

For unusually short field take-offs, apply 20° flaps (second notch) prior to take-off. An alternate procedure of applying 20° flaps just before the airplane is ready to leave the ground may be used in lieu of the above method of leaving the flaps in the 20° position throughout the entire ground run. For further discussion of the use of wing flaps for take-off, see page 3-4.

Wing Flap Settings

For Normal Take-off.....Up (0°)
For Short Take-off....1st notch (10°)
For Shortest Take-off.2nd notch (20°)
For Landing—
Select as desired.....Up (0°)

1st notch (10°)
2nd notch (20°)
3rd notch (30°)
4th notch (40°)

TACTAIR AUTOMATIC FLIGHT CONTROLS.

The optional Tactair automatic flight control system is a pneumatic system consisting of bellows attached to the manual control surface cables, specially-modified gyro instruments and a control head mounted on the instrument panel. The entire system is powered by the engine-driven vacuum pump.

The control surface servo bellows respond to pneumatic signals from the gyro instruments and the control head, to maintain the position set on the control head by the pilot. The servos may be overridden at any time, by operating the aileron and elevator controls. The pressure required to overpower the servos is not excessive and no damage to the system will result, even if the servos are overpowered for some time. When the controls are released, the autopilot will return the airplane to the position set on the control head.

The pickup units in the gyro instruments automatically change both the amount and the rate of change in their signals in accordance with the amount and rate of deviation of the airplane from the selected position. Thus, a large and rapid deviation will produce a large and rapid signal. The servo's response likewise will be large and rapid. However, as the airplane responds, the signals will diminish at a rate exactly proportional to the rate at which the airplane is returning to normal. The servos, in turn, bring the control surfaces back to neutral in the same pattern. The autopilot thus controls the airplane just as the human pilot would. Corrections are smooth and precise and at no time do they produce excessive flight loads on the airplane.

The Tactair system is available in three configurations. The T-1 Roll Stabilizer consists of the aileron servos, attitude gyro and a control head. As its name implies, its primary purpose

TO SET YOUR PARKING BRAKE PERMLY PRESS ON BRAKE PEDALS. PULL OUT ON PARKING BRAKE KNOS. BELEASE THE POOT PRESSURE FROM THE BRAKE PEDALS BEFORE BELEASING PARKING BRAKE KNOS. Do not pull out on the knob with a hard pull. Merely pull the knob out as far as it will go with an average amount of pressure. NOTE The parking brake knob to spring landed and will Brake Cylinder .. Locking Lever return to its original poto pulled up sition when the hand pressure is released. Brake Cylinder Your Brakes are now set. TO RELEASE YOUR PARKING BRAKE PUSH PARKING BRAKE KNOS ALL THE WAY IN. APPLY FAIRLY HEAVY POOT PRESSURE TO BRAKE PEDALS. MILEASE THE FOOT PRESSURE FROM THE BRAKE PEDALS. The Locking Lever will samp down is this operation. Normaily, you can hear a click when the levers enap down. Your Brakes are now release

Figure 8. Parking Brake Operation

is to maintain lateral stability. The T-2 Heading Lock system uses a modified directional gyro coupled to the T-1 roll stabilizer system. In the T-2 system, both the attitude gyro and the directional gyro signal corrections to the aileron servos to provide both roll and directional stability. The T-3 autopilot system adds an elevator servo coupled to the attitude gyro. By adding elevator control to the roll stabilizer and heading lock, the T-3 controls pitch, roll and direction.

The directional gyro used in the T-2 and T-3 systems has an additional compass card placed above the regular card and linked to the heading lock pickups in the gyro. To set a course, rotate the course selector knob to the right of the compass card window until the desired heading on the upper card falls under the lubber line.

Detailed operating instructions are found in Sections II and III.

LANDING GEAR. MAIN LANDING GEAR.

Your airplane is equipped with Cessna's "Land-O-Matic" landing gear. It consists of a tapered, spring steel leaf supporting each main wheel.

NOSE GEAR.

A steerable nose gear, incorporating an air and oil shock strut, is mounted on the firewall. Nose wheel steering is accomplished through normal operation of the rudder pedals. The nose wheel is steerable through an arc of approximately 8° each side of neutral, after which it becomes free-swiveling

up to a maximum deflection of 30° right or left of center. Thru the use of the brakes, the airplane can be pivoted about the outer wing strut fitting. The nose wheel is automatically located in the centered position while the aircraft is in the air. Movement of the rudder pedals will not affect the nose wheel while the airplane is in flight. Thus, the pilot has the assurance that the nose wheel will be straight at the initial landing touchdown.

SPEED FAIRINGS (OPTIONAL EQUIPMENT).

Speed fairings are available as optional equipment for your airplane. The design purpose of speed fairings is to increase the speed of the aircraft. To accomplish this in the most efficient manner, and add to the beauty of the aircraft, it was necessary to reduce clearance in the wheel opening to a minimum to eliminate drag. An accumulation of mud, snow or ice in this opening would have a "braking effect" on the wheel. If these elements can not be avoided, make an inspection of the wheel fairings before each flight and remove any accumulations which may be forming.

BRAKE SYSTEM.

The hydraulic brakes on the main wheels are conventionally operated by applying toe pressure to either the pilot's or co-pilot's rudder pedals. The rotation of the pedals actuates the brake cylinders resulting in a braking action on the main landing gear wheels. The brakes may also be set by

operating the parking brake knob. (Refer to figure 8 for parking brake operation).

SKIPLANE GEAR.

For operation from snow or ice, a skiplane configuration of the 175 is available. The skiplane uses special, heavy-duty axles on the main gear, with Federal Model A-3500A skis and a Federal Model NA-1200A ski on the nose gear. The skis and the conventional wheels and tires may be interchanged as necessary.

INSTRUMENTS.

All instruments are mounted on the instrument panel except the optional free air temperature gage and the magnetic compass. The free air temperature gage is located in the right cabin ventilator and the compass on the windshield center strip. For correct free air temperature readings, the ventilator must be open slightly.

TURN-AND-BANK INDICATOR.

The optional turn-and-bank indicator is electrically-operated. It has no separate control switch. Turned on by the master switch, it operates until the master switch is turned off.

PITOT-STATIC SYSTEM INDICATORS.

The airspeed indicator (figure 1), altimeter (figure 1), and optional rateof-climb indicator (figure 1) are operated by the pitot-static system. This system measures the difference between the impact air pressure entering the pitot tube, mounted on the lead-

ing edge of the left wing, and static air pressure obtained from a static port mounted on the left forward side of the fuselage. To keep the pitot tube opening clean, a cover the be placed over the pitot tube when. ever the plane is idle on the ground. The static port should be kept free of polish, wax, or dirt for proper airspeed

STALL WARNING INDICATOR

The stall warning indicator is an electrically-operated horn which gives



warning whenever a stall is approached, regardless of speed, altitude, attitude, weight or other factors which change the stalling speed. The stall warning transmitter is adjusted to give an audible warning approximately 5 mph above the normal straight-ahead stalling speed. Other attitudes and speeds provide a wider margin.

Under safe flight conditions, you should hear the warning horn only briefly on landing; and due to ground effect, usually there will be no signal if the landing is properly executed.

The unit will signal on the ground The unit occasionally when you are only in high surface winds. Thus, requires no silencing switch which night be left off inadvertently.

PITOT AND STALL WARNING HEAT.

The optional pitot heat circuit breaker switch operates electric heaters in the pitot mast and stall warning mansmitter, to prevent icing. The heaters should be turned on before ice is encountered.

CLOCK (OPTIONAL EQUIPMENT).

An eight-day, stem wind, aircraft clock (figure 1) may be installed as optional equipment on the extreme left side of the instrument panel just to the left of the altimeter.

HEATING AND VENTILATING SYSTEM.

Fresh air for heating and ventilating the cabin is supplied by two sources: a cold air intake in the rear engine baffle and a manifold-type heater. Both sources are connected to a mixer box, from which the air is led to outlets above the rudder pedals and at each front doorpost, and to the windshield defroster outlet.

Two push-pull controls on the instrument panel control the system, including the defroster, which has no separate control. The knob marked "CABIN AIR" operates a shutoff valve in the mixer box to regulate the volume of air, while the knob marked "CABIN HEAT" operates a

mixer valve which proportions the hot and cold air entering the duct.

For cabin ventilation, push the cabin air knob in. To raise the air temperature, pull the cabin heat knob out. To shut off all airflow, push the heat knob in and pull the air knob out.


NOTE

Always push the heat knob in before pulling the air knob out, to avoid overheating the heater ducts.

CABIN VENTILATORS.

Ventilation for the cabin area in addition to that obtained through the heater ducts, is provided by manuallyadjusted cabin ventilators. Two ventilators are installed: one on the left side of the cabin in the upper corner of the windshield, and the other in the same position on the right.

To provide a flow of air, pull the ventilator tube out. The amount of air entering the cabin can be regu-

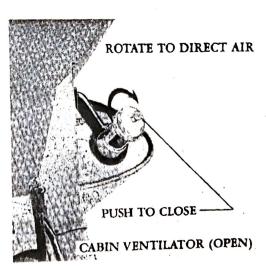

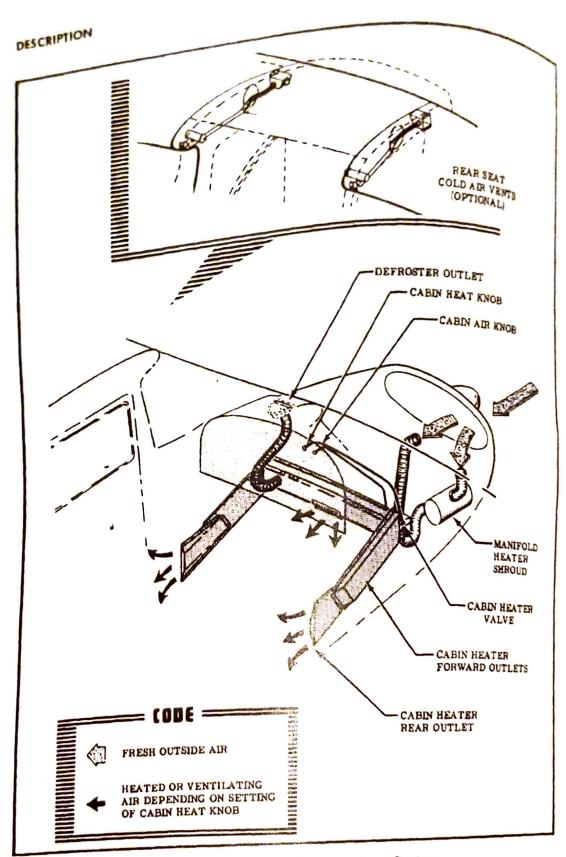


Figure 9. Cabin Air Temperature System

pred by varying the distance that the predictor tube is extended.

To change the direction of airflow, rotate the ventilator tube to the position desired.

REAR SEAT VENTILATORS.

Additional cold air for the rear seat passengers is provided by optional passers outlets in the cabin ceiling, above the rear doorposts. The outlets are ball-and-socket type and may be turned to direct the flow of air 25 desired. The volume of air from each outlet is regulated by turning a knurled ring on the rim of the outlet.

LIGHTING EQUIPMENT. NAVIGATION LIGHTS.

Conventional navigation lights are controlled by a push-pull switch (figure 2). With the optional navigation lights flasher, a three-position pushpull switch is used. The middle detent on the switch is the steady position and all the way out is the flashing position. When the optional rotating beacon is on, the flasher should not be used since there is a possibility




that the double flash will be confusing.

LANDING LIGHTS (OPTIONAL EQUIPMENT).

The landing lights consist of two lamps mounted side-by-side in the leading edge of the left wing. One of the lamps is adjusted to give proper illumination of the runway during landing and take-off while the other lamp is set to provide illumination of the ground for taxiing purposes. The landing light switch (figure 2), labeled "LAND LIGHTS, PULL ON", is mounted on the upper right hand portion of the instrument panel. To turn the taxi light on, pull the switch out to the first stop. To turn both the landing light and the taxi light on, pull the switch out to the second stop. To turn the lights off, push the switch all the way in.

INSTRUMENT LIGHTS.

A red instrument light is mounted on the cabin ceiling to illuminate the instrument panel during night operation. The light, in conjunction with

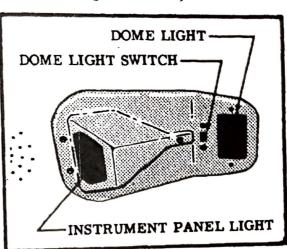


the compass light, is controlled by a rheostat switch (figure 1), labeled "INSTR LIGHTS", located slightly below and to the left of the airspeed indicator. To turn the instrument and compass lights on, rotate the instrument light cheostat switch clockwise until the desired illumination is obtained. To turn the lights off, turn the switch counter-clockwise as far as it will go.

Optional radio dial lights are controlled by the same rheostat switch which controls operation of the instrument and compass lights.

MAP LIGHT.

An optional map light is mounted near the left cabin ventilator and is controlled by a slide switch mounted on the left door post. The light is fully adjustable to shine in any direction, and a lens adjustment knob mounted on the light makes it possible to change the beam from a spot to flood illumination.

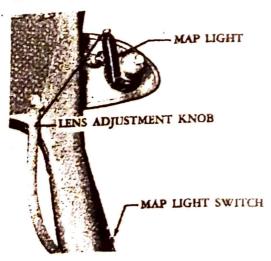

DOME LIGHT.

A dome light is mounted in the cabin ceiling and is controlled by a

slide switch mounted just forward in

ROTATING BEACON (OPTIONAL EQUIPMENT).

A rotating beacon may be installed as optional equipment on the tip of the vertical fin. The light serves as an including of anti-collision light, and rotates through

NOTE

The rotating beacon should be turned off during flight through clouds to prevent a distracting

The rotating beacon switch is mounted within the row of switches on the upper switch and control panel (figure 2). The switch incorporates 2 manually-set circuit breaker. Pushing the switch in closes the circuit breaker and turns the rotating beacon on. To turn the light off, pull the switch but. ton out. A short in the circuit will also open the circuit breaker and force the switch button out.

SEATS.

FRONT SEATS.

The front seats are individually mounted on tracks and are adjustable fore and aft. The seat adjustment handle is located within easy reach on the left front side of each front seat. To adjust the seat, simply pull up on the handle and slide the seat to the most comfortable position.

NOTE

Test the front seats for secure jutching after adjusting them to the desired position.


REAR SEAT.


The rear seat has provisions to accommodate two people. The back of
the seat is hinged at the bottom to
permit seat adjustment and easy access
to the baggage compartment. A seat
adjustment handle is located behind
and at the top of the rear seat back.

MISCELLANEOUS EQUIPMENT.

CABIN DOORS.

Two cabin doors are provided on your airplane. Each door incorporates a flush type door handle on the outside and a conventional type handle on the inside. To open the door from the outside, pull out on the forward edge of the flush type handle. To open the door from the inside, rotate the inside door handle down.

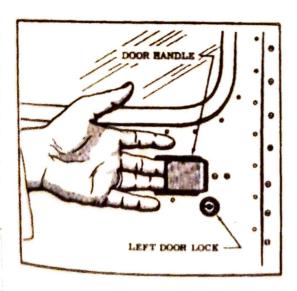

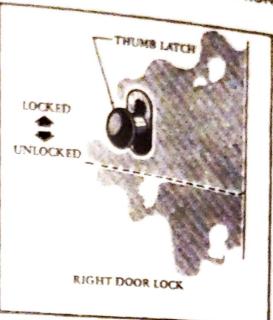

The right cabin door can be locked from the inside only. To lock the door, push up on the thumb latch located on the aft part of the door just below the window. To unlock, push down on the thumb latch.

The left door can be locked from the outside only with a key operated lock. The same key that is used for the ignition is also used to lock the door.

CABIN WINDOWS.

All cabin windows except the left door window are fixed and permanently sealed. The left door window is hinged at the top and opens outward for additional ventilation.

To open the window, press the release button on the latch and rotate the handle upward. The window will open without pressure, and be held out by spring-loaded limit arms.

NOTE

In flight, the window should be opened cautiously, since air pressure will push it out with considerable force which may damage the limit arms. Grasp the handle firmly and ease the window out to its open limit.

BAGGAGE COMPARTMENT.

The baggage compartment, back of the rear seat, may be loaded and unloaded through a door on the left side of the fuselage. The door is fitted with a flush-type handle and a cylinder lock.

The baggage compartment may be reached from inside the cabin by pulling gently forward and down on the rear seat adjustment handle.

UTILITY SHELF.

A utility shelf is located just above the baggage compartment. This shelf will prove very handy for storing hats, brief cases, and small articles.

ASSIST STRAPS.

Two assist straps are mounted on the front door posts and are used as an aid in entering and leaving the airplane.

COAT HANGER HOOK.

For your convenience, a coat hanger

hook has been installed in the cabin ceiling above the back of the teat seat seat Your coats can be hung, full-length Your coats can and wrinkle-free, between the back of the rear seat and the baggage shelf without interfering with the comfort

ASH RECEIVERS.

Four ash receivers are provided in your airplane. Two ash receivers are your and sad and and accept to the windshield and are used by the occupants of the front seats. The remaining ash receivers are mounted on the cabin walls just aft of the text door post bulkheads and are access. ible to the rear seat passengers.

LOADING YOUR CESSNA.

There are several different ways to "load" your Cessna, all of which are satisfactory. However, from expenence, we have found the following sequence of steps to be most satisfactory under average loading conditions:

First, load your baggage in the baggage compartment.

Next, load the front seats. Finally, load the rear seat.

SECTION 11 **OPERATING CHECK LIST**

AFTER FAMILIARIZING YOURSELF with the equipment of your Cessna 175, your primary concern will normally be the operation of Cessna 1779, This section lists, in Pilot's Check List form, the steps your airpinto operate your Cessna efficiently and safely. It is not a check list in its true form as it is considerably longer, but it does cover briefly all of the points that you would want to or should know concerning the operation of your Cessna 175.

The flight and operational characteristics of the Model 175 Cessna are normal in all respects. There are no "unconventional" characteristics or operations that need to be mastered. All controls respond in the normal way within the entire range of operation of the airplane. All airspeeds mentioned in sections II and III are indicated airspeeds. Corresponding true indicated airspeeds may be obrained from the airspeed correction table in section VI.

BEFORE ENTERING THE AIRPLANE.

(1) Perform an exterior inspection of the airplane (see figure 10). On Skiplane, make sure skis are not frozen down. When breaking loose frozen skis, avoid excessive side loads on the nose gear.

BEFORE STARTING THE ENGINE.

- (1) Operate controls and make a visual check for proper operation.
- (2) Make sure windshield is clean for maximum visibility.
- (3) Adjust seat for comfort and distance to rudder pedals.

Test the front seats for secure latching after adjusting them to the desired position.

- (4) Check brakes and set parking brake.
- (5) Fasten and check safety belt.

STARTING THE ENGINE.

(1) Set carburetor heat to "cold" (full in).

(2) Set mixture control knob to "full rich" (full in).

throttle static RPM should be between 2545 and 2645 RPM

(8) Check autopilot disengaged.

TAKE-OFF.

NORMAL TAKE-OFF.

- (1) Flaps 0° (retracted).
- (2) Set carburetor heat to "cold" (full in).
- (3) Advance throttle slowly to full throttle.
- (4) Avoid dragging brakes by keeping heels on floor.
- (4) Avoid dragging brancs of the elevator control to raise nosewheel
 (5) Apply slight back pressure on the elevator control to raise nosewheel

CAUTION

Do not raise the nose of the airplane excessively high as this will only lengthen the take-off run.

(6) Climb at 84 MPH.

MINIMUM GROUND RUN TAKE-OFF.

- (1) Wing flaps 20° (second notch).
- (2) Apply full throttle while holding brakes.
- (3) Release brakes.
- (4) Take-off slightly tail low.

OBSTACLE CLEARANCE TAKE-OFF

- (1) Wing flaps 20° (second notch).
- (2) Apply full throttle while holding brakes.
- (3) Release brakes.
- (4) Take-off slightly tail low.
- (5) Level off momentarily to accelerate to best angle of climb speed (60 MPH).

SOFT OR ROUGH FIELD TAKE-OFF WITH NO OBSTACLE AHEAD.

- (1) Wing flaps 20° (second notch).
- (2) Apply full throttle and raise nosewheel clear of ground with elevator control back pressure.
- (3) Take-off in a tail low attitude.
- (4) Level off momentarily to accelerate to a safe airspeed.
- (5) Retract flaps slowly as soon as a reasonable altitude is obtained. (See "Take-Off" paragraph on page 3-4).

TAKE-OFF IN STRONG CROSSWIND.

(1) Flaps 0° (retracted).

(1) Flaps of the state and use sufficient aileron into the wind to maintain (2) Apply full throttle and use sufficient aileron into the wind to maintain wings level.

(3) Hold nosewheel on ground 5-10 MPH above normal take-off speed.

(3) Take-off abruptly to prevent airplane from settling back to runway while drifting.

CLIMB.

(1) If no obstacle is ahead climb out with flaps up at 80-90 MPH with full throttle. If maximum rate of climb is desired use full throttle and 84 MPH, at sea level (see figure 25). Reduce climb speed about 1/2 MPH for every 2000 feet of altitude above sea level.

(2) To climb over an obstacle after take-off use the best angle of climb

speed of 61 MPH, with full throttle and flaps up.

(3) Mixture should be "full rich" up to 5000 feet, and then leaned for smooth engine operation.

CRUISING.

(1) Recommended cruising rpm — 2400-3200 (see page 4-2).

(2) Trim airplane by adjusting elevator tab.

(3) Oil pressure — 30-45 lbs./sq. in.

(4) Oil temperature — within green arc range.

(5) Lean mixture to maximum rpm.

(6) Lean mixture as required to obtain smooth engine operation when using carburetor heat in cruise.

LET-DOWN.

(1) Set mixture control knob to "full rich" (full in).

(2) Reduce power to obtain desired let down rate at cruising speed.

(3) Apply enough carburetor heat to prevent icing if icing conditions exist.

BEFORE LANDING.

(1) Set fuel selector to "both tanks". (2) Recheck mixture control knob to "full rich" (full in).

(3) Apply carburetor heat before closing throttle.

(4) Glide at 70-80 MPH, with flaps up.

(5) Lower flaps as desired below 100 MPH.

(6) Maintain 65-75 MPH, with flaps extended.

OPERATING CHECK LIST

- (7) Trim airplane with elevator trim tab for glide.
- (8) Check autopilot disengaged.

LANDING.

NORMAL LANDING.

(1) Landing technique is conventional for all flap settings.

SHORT FIELD LANDING.

- (1) Make a power-off approach at 63 MPH, with flaps 40° (fourth notch).
- (2) Land on main wheels first.
- (3) Lower nosewheel to ground immediately after touchdown.
- (4) Apply heavy braking as required.

CAUTION

Excessive braking will skid tires, resulting in lengthened ground run and tire damage.

LANDING IN STRONG CROSSWIND.

- (1) Use minimum flap setting required for field length.
- (2) Use wing low, crab, or combination method of drift correction.
- (3) Land in a nearly level attitude.
- (4) Hold straight course with steerable nosewheel and occasional braking if necessary.

CAUTION

If a go-around is necessary, push the carburetor air heat knob full in to assure rapid engine acceleration.

AFTER LANDING.

- (1) Raise flaps after completion of landing roll.
- (2) Normal glide and taxiing should cool the engine sufficiently; however, if an excessive amount of taxiing is necessary, allow the engine to cool before cutting the ignition by allowing it to idle at 1000 rpm two to three minutes.
- (3) Stop engine by pulling the mixture control knob to full lean position. Do not open the throttle as the engine stops.
- (4) After the engine stops, turn the ignition switch "off".
- (5) Turn all switches "off". Be sure otherwise your battery may run down overnight.
- (6) Set parking brake, if required.

SECTION III SOPERATING DETAILS

THE FOLLOWING PARAGRAPHS cover in somewhat greater detail the items entered as a Check List in Section II. Every item in the list is not discussed here. Only those items on the Check List that required further explanation will be found in this section.

CLEARING THE PROPELLER.

"Clearing" the propeller should become a habit with every pilot. Making sure no one is near the propeller before the engine is started should be a positive action. Yelling "clear" in loud tones is best. An answering "clear" from ground crew personnel is the response that is required.

ENGINE OPERATING PROCEDURE.

You have a new Continental engine made to the highest standards available. This engine has been carefully operated in its run-in and flight tests so that the engine, as you receive it, is in the best possible condition. Proper engine operation will pay you rich dividends in increased engine life. The following points are mentioned so that you may receive the maximum of trouble-free operation and low maintenance cost.

STARTING.

Ordinarily, the engine starts best and smoothly with proper priming

and the throttle opened 1/8 inch. Check the oil pressure 2s soon 2s the engine is running.

WARM-UP.

The engine should be warmed up at 800 to 1000 rpm headed into the wind where possible. The remainder of the warm-up should be accomplished while taxiing and should not exceed 1800 rpm. Engine ground operation or idling in summer temperatures should be limited to the very minimum and, in most cases, starting, taxiing to the end of the runway, and checking the engine quickly is an adequate amount.

TAKE-OFF.

Most engine harm results from improper operation before the engine is properly warmed and temperatures stabilized. For this reason, on your initial take-off, use maximum power only when and as necessary for safe operation of the airplane, reducing power as quickly as possible.

Since the skiplane has no brakes, if a full-power run-up appears advisable

it should be made at the start of the take-off run. With the airplane moving, the engine should turn 2600 to 2700 RPM.

CRUISING.

The maximum recommended cruising rpm's are 2900 rpm at sea level, 3050 rpm at 5000 ft., and 3200 rpm at 10000 ft. These rpm's will produce approximately 72% power at the given altitudes. Greater range can be obtained at lower rpm settings as shown in the cruise performance chart. At any cruising altitude, adjust the mixture by pulling the mixture control knob out until the rpm decreases slightly and then enrichen to maximum engine rpm for that particular throttle setting. Airspeed must be held constant during leaning for maximum rpm since small changes in airspeed will result in small rpm changes. The maximum rpm increase which can be expected as the mixture is leaned from "full rich" is 30 to 50 rpm. Readjust the mixture for each change in power, altitude or carburetor heat.

LET-DOWN.

The cruising glide should begin far enough away from destination so that a gradual descent can be made with power on, with mixture full rich. On approaching the landing field, the engine should be throttled down gradually and the glide, with closed throttle, should not be longer than necessary.

IDLING ENGINE.

Your engine is set to idle well below 800 rpm, but at engine speeds below 800 rpm, satisfactory piston lubrica. tion cannot be maintained. Therefore, it is recommended that the engine not be allowed to operate below 800 rpm for prolonged intervals.

STOPPING ENGINE.

The engine should always be allowed to idle (800 to 1000 rpm) for two to three minutes before stopping. This not only permits the temperature of the various engine parts to equalize, but works oil up around the pistons and rings, thus leaving the engine in good condition for the next stare. Providing the engine has been idled for approximately two minutes, it is recommended that the engine be stopped by using the mixture control knob. The procedure should be to place the mixture control knob in the full lean position (pull the knob out as far as possible). Do not open the throttle as the engine stops. After the engine stops, turn the ignition switch to the "off" position...

TAXIING.

Release the parking brake before taxiing and use the minimum amount of power necessary to start the airplane moving. During taxi, and especially when taxiing downwind, the rpm should be held down to prevent excessive taxi speeds. Taxiing should be done at a speed slow enough to make the use of brakes almost entirely unnecessary. Using the brakes as sparingly as possible will prevent

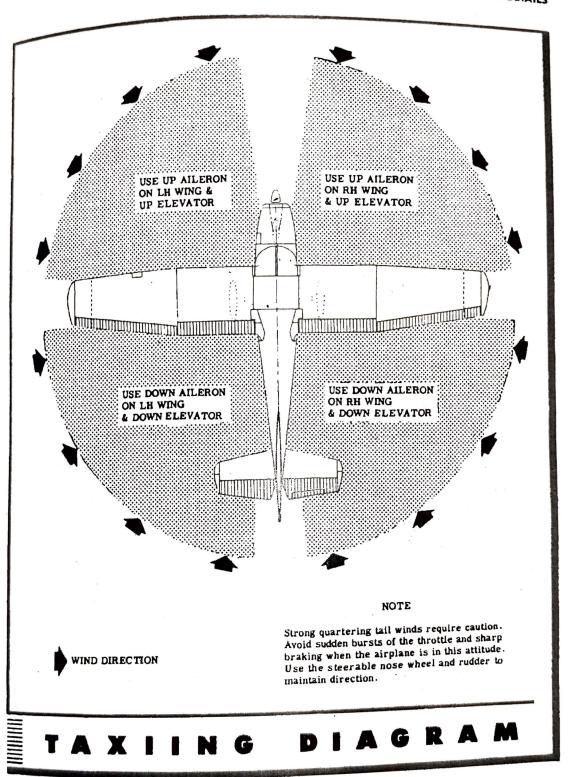


Figure 11.

undue wear and strain on tires, brakes, and landing gear. Normal steering is accomplished by applying pressure to the rudder pedal in the direction the airplane is to be turned. For smaller radius turns, at slow speed, the brakes may be used on the inside wheel. At slow taxi speed, this airplane may be pivoted about the outboard strut fitting without sliding the tires. When taxiing in crosswinds it is important that speed and use of brakes be held to a minimum and that all controls be utilized (see taxiing diagram on page 3-3) to maintain directional control and balance.

NOTE

Caution should be used when taxiing over rough fields to avoid excessive loads on the nosewheel. Rough use of brakes and power also add to nose wheel load. A good rule of thumb: "Use minimum speed, power, and brakes."

Taxiing over loose gravel or cinders should be done at low engine speed to avoid abrasion and stone damage to the propeller tips. Full throttle runups over loose gravel are especially harmful to propeller tips. When take-offs must be made over a gravel surface, it is very important that the throttle be advanced slowly. This allows the airplane to start rolling before high rpm is developed, and the gravel will be blown back of the propeller rather than pulled into it. When unavoidable small dents appear in the propeller blades, they should be imme-

diately corrected as described in section

On skis, the 175 taxis like any other skiplane. With nose ski steering and no brakes, its turning radius is greater than for the landplane with the inside wheel braked. The skiplane's turning radius center point is approximately 8 feet beyond the wing tip.

TAKE-OFF.

Normal take-offs are performed with the flaps retracted. Minimum run, obstacle clearance and soft or rough field take-offs are all performed with 20° flaps. With the flaps extended 20°, ground run is reduced slightly, the total distance to clear a 50 foot obstacle is reduced approximately 10%, and take-off speed is approximately 5 MPH slower.

Flap deflections of 30° and 40° are not recommended at any time for take-off. General rules for flap operation during take-off are as follows:

Don't under marginal conditions leave flaps on long enough that you are losing both climb and airspeed.

Don't release flaps with airspeed below flaps up stalling speed. (See stall chart on page 3-5).

Do slowly release the flaps as soon as you reasonably can after take-off, preferably 50 feet or more over terrain or obstacles.

Consult the take-off chart (figure 24) for take-off distances under various gross weight, altitude, and headwind conditions.

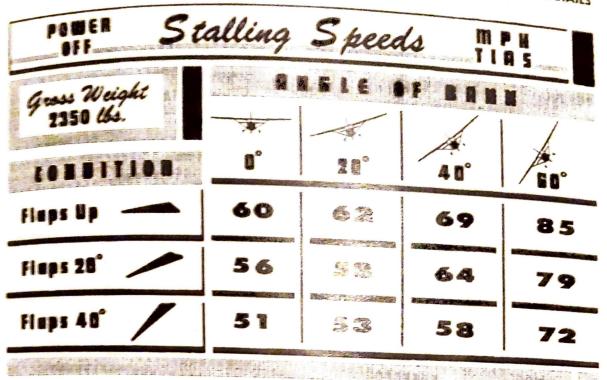


Figure 12. Stall Chart

CLIMB.

For detailed climb data, see climb performance chart in Section VI. Normal climbs are conducted at 80-90 MPH with flaps up and full throttle for best engine cooling. The best rate-of-climb speeds range from 84 MPH at sea level to 80 MPH at 10,000 feet. If an obstruction dictates the use of a steep climb angle, the best angle-of-climb speed should be used with flaps up and full throttle. These speeds vary from 61 MPH at sea level to 70 MPH at 10,000 feet.

NOTE

Steep climbs at these low speeds should be of short duration because of poor engine cooling.

Climb techniques and airspeeds for

the skiplane are identical to the landplane. The skiplane rate-of-climb is reduced slightly by the additional drag of the skis.

CRUISE.

For cruise data, see cruise performance chart in Section VI.

Range and endurance figures are given for lean mixture, from 2500 feet to 12,500 feet and for rich mixture at altitudes of 2,500 feet and 5,000 feet. All figures are based on zero wind, 42 gallons of fuel for cruise, McCauley 8467 propeller, 2350 pounds gross weight, and standard atmospheric conditions. For lean mixture figures, the mixture is leaned until the rpm decreases slightly and then enrichened to maximum rpm. Allowances for

fuel reserve, headwinds, take-offs and climb, and variations in mixture leaning technique should be made and are in addition to those shown on the charts. Other indeterminate variables such as carburetor metering characteristics, engine and propeller conditions, and turbulence of the atmosphere may account for variations of 10% or more in maximum range.

Skiplane cruise and range performance is given in the Skiplane Cruise Performance Chart in Section VI. Skiplane cruise techniques and engine limits are identical to those for the landplane.

STALLS.

The stalling speeds shown (see stall chart) are for forward c.g., normal category, full gross weight conditions. Other loadings result in slower stalling speeds. The horn stall warning indicator produces a steady signal 5 to 10 MPH before the actual stall is reached and remains on until the airplane flight artitude is changed. Fast landings will not produce a signal.

The stall characteristics are conventional for the flaps up and flaps down condition. Slight elevator buffeting may occur just before the stall with flaps down.

LANDING.

Normal landings are made power off with any flap setting. Slips are prohibited in full flap approaches because of a downward pitch encountered under certain combinations of airspeed and sideslip angle.

Approach glides are normally made at 70-80 MPH with flaps up, or 65-75 with flaps down, depending upon the turbulence of the air. The elevator trim tab is normally adjusted in the glide to relieve elevator control forces.

Landings are usually made on the main landing wheels to reduce the landing speed and the subsequent need for braking in the landing roll. The nose wheel is lowered gently to the runway after the speed is diminished to avoid unnecessary nose gear strain. This procedure is especially important in rough field landings.

Heavy braking in the landing roll is not recommended because of the probability of skidding the mainwheels with the resulting loss of braking effectiveness and damage to the tires.

Skiplane stalling and landing speeds are identical to the landplane. However, since landing distances will vary greatly under different runway surface conditions, no landing distances are given.

COLD WEATHER OPERATION.

Prior to starting on cold mornings, it is advisable to pull the propeller through several times by hand to "break loose" or "limber" the oil, thus conserving battery energy. In extremely cold (-20° F) weather, prime the engine as follows:

- (1) Clear propeller.
- (2) Turn master switch "on".

- (3) With ignition switch "off" and throttle closed, prime the engine four to ten strokes as the engine is being turned over. (4) Turn ignition switch "on".
- (5) Open throttle 1/8 inch (to idle
- position) and start engine by pulling starter handle.

NOTE

In extremely cold weather, 2 few strokes of the primer as the engine fires will enable the engine to keep running. (Avoid everpriming). After priming, push the primer knob all the way in and turn to locked position to avoid possibility of engine drawing fuel through the primer. To avoid damage to the starter gear, do not pull out on starter handle for a second starting attempt until the engine has come to a stop.

During cold weather operations, no indication will be apparent on the oil temperature gage prior to take-off if outside air temperatures are very cold. After a suitable warm-up period (2-5 minutes at 1000 rpm), accelerate the engine several times to higher engine rpm. If the engine accelerates smoothly and the oil pressure remains normal and steady, it is ready for take-off.

To operate the engine in occasional outside air temperatures from 10° F to 20° F, the following procedure is recommended:

(1) Use full carburetor heat during engine warm-up and ground check.

- (2) Use minimum carburetor heat required for smooth operation in take-off, climb, and cruise.
- (3) Select relatively high rpm settings for optimum mixture distribution, and avoid excessive leaning in cruising flight.
- (4) Avoid sudden throttle movements during ground and flight operation.

When operating in sub-zero temperatures, avoid using partial carburetor heat. Partial heat may raise the carburetor air temperature to the 32degree to 80-degree range where icing is critical under certain atmospheric conditions.

For operation in consistently low temperatures, a winterization kit is available from Cessna Dealers. kit consists of removable baffles for the cooling air intakes in the nose cowling, which help maintain engine temperatures in extremely cold weather.

OIL DILUTION SYSTEM.

If your airplane is equipped with an oil dilution system, and very low temperatures are expected, dilute the oil before stopping the engine. Determine the dilution time required for the anticipated temperature, from the Oil Dilution Table. With the engine operating at 1,000 rpm, hold down the oil dilution switch button the necessary time. Fuel will flow into the oil pump at the rate of 1 quart every minute. If more than two quarts of fuel appears necessary to dilute the oil for the anticipated temperature,

OPERATING DETAILS

check the oil level before starting to dilute. With a full sump, only two quarts may be added without risk of overflow and its attendant fire hazard. To make room for the additional fuel some oil must be drained before dilution. The total volume of fuel and oil must not exceed 12 quarts.

During the dilution period, watch the oil pressure closely. A slight, gradual pressure drop is to be expected as the oil is thinned. Stop the engine, however, if any sharp fluctuation in pressure is observed; it may be caused by an oil screen clogged with sludge washed down by the fuel.

NOTE

When the dilution system is used for the first time each season, the oil should be changed and the oil screens cleaned to remove sludge accumulations washed down by the fuel. Use the full dilution period, drain the oil, clean the screens, refill with fresh oil and redilute as required for the anticipated temperature before the engine has cooled completely.

On starting and warm-up after dilluting the oil, again watch the oil pressure closely for an indication of sludge blocking the screens. If the volume of diluted oil exceeds 11 quarts, run the engine long enough to evaporate some of the fuel and lower the sump level before take-off. Otherwise, the sump may overflow when the airplane is nosed up

OXYGEN SYSTEM (OPTIONAL EQUIPMENT).


An oxygen system, capable of supplying oxygen for a pilot and three passengers, is available as optional equipment for your Cessna. It is completely automatic and requires no manual regulation.

The system consists of an oxygen cylinder, a pressure gage, pressure regulator, outlet couplings, and four disposable type oxygen masks, complete with rubber hoses and position indicators. The face masks and hoses are stored in a plastic bag on the utility shelf when not in use.

FOIL DILUTION TABLE-			
TOIL DILUTION TABLE	TJ	EMPERATURE]
	0°F	-10° F	-20° F
Dilution Time	1 min.	2 min.	3 min.
Fuel Added	1 qt.	2 qt.	3 qt.
Oil Drained	0 qt.	0 qt.	1 qt.
(Sump Full)			

NOTE: Maximum sump capacity is 12 quarts.

Maximum fuel and oil in sump for take-off is 11 quarts.

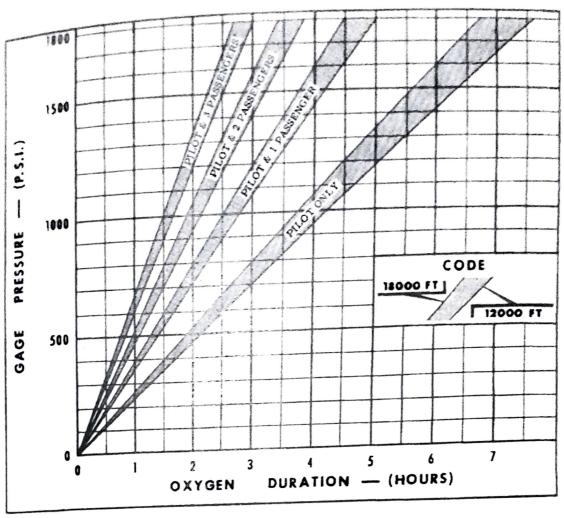

OXYGEN SYSTEM OPERATION.

Prior to flight, check to see that the valve on the oxygen cylinder is full open (full counterclockwise). Note the oxygen pressure gage reading to be sure that there is an adequate supply of oxygen for the trip.

To use the oxygen system, proceed as follows:

- Select mask and hose from plastic bag on utility shelf.
- b. If mask is not connected to hose, attach by inserting short plastic

tube securely into oxygen delivery hose.

- c. Attach mask to face.
- d. Select oxygen coupling in overhead console panel. Push dust cover to one side and insert end of mask hose into coupling. Oxygen will start to flow and no further adjustments are necessary.

NOTE

If the red oxygen flow indicator for the face mask hose line is out of sight, oxygen is flowing.

TACTAIR AUTOMATIC FLIGHT CONTROLS.

Although it is possible to take off and land with the Tactair units engaged, merely by overpowering them, you will find that control forces are greater and your feel of the airplane is diminished. Before taking off or landing make sure the master knob is off (pushed in).

Since it is entirely pneumatic and operated by the engine-driven vacuum pump, the Tactair system needs no warm-up period before engagement. It may be used at any altitude up to 20,000 feet; above 20,000 feet, atmospheric pressure is insufficient to supply the necessary control forces.

Before engaging the system, trim the airplane straight and level and center the knobs on the control head. Then pull out the master knob. If the airplane is not trimmed, or the knobs are not centered, as soon as the unit is engaged the airplane's attitude will change. The change will not be abrupt and no excessive loads will be imposed on the airframe, but operation will be smoother if both airplane and control head knobs are trimmed before engagement.

T-1 ROLL STABILIZER OPERATION.

To operate the T-1 roll stabilizer unit, center the trim knob and pull on the master knob. With the roll trim knob centered, the unit will immediately level the wings from any attitude within the limits of the gyro. The trim knob may be rotated to obtain up to 10 degrees of bank. Sharp

turns may be made merely by over riding the unit with the control wheel

T-2 HEADING LOCK OPERATION

Engagement of the T-2 unit is iden tical to the T-1, except for the add. tional caging and setting of the directional gyro and setting the course or. lector card before engaging the unit Once the unit is engaged, turns to; new heading may be made merely by turning the course selector knob to the new heading. If the new heading is within 80 degrees of the former heading, the unit will make approximately a one-degree-per-second turn to the new heading. (If the new head. ing is more than 80 degrees from the original, the autopilor will turn to the reciprocal of the new heading.) If the airplane hunts or oscillates, adjust the roll trim knob until the selector card and directional gyro are aligned. The airplane may be slightly wing-low; it is in this manner that the unit trims out torque effects.

Turns may be made by overriding the stabilizer unit. When you release the controls, the airplane returns to the course selector heading if it is within 80 degrees, or to its reciprocal.

Caging the directional gyro eliminates the heading lock feature; however, the relation of the two compass cards will result in a continuous signal to the control head. If the cards are aligned, the signal will be balanced and the wing will remain level as with the T-1. If the cards are not aligned, a continuous bank signal will be sent, attempting to match the com-

pass cards. As soon as the gyro is uncaged, the heading lock will function is usual.

1-3 AUTOPILOT OPERATION.

To engage the T-3 autopilot, trim the airplane straight and level, handsoff. Set the autopilot pitch and turn knobs to center and the course selector card to coincide with the heading on the directional gyro. Then pull on the master knob.

The roll and heading lock functions of the T-3 unit are identical to the T.2, except that the heading lock knob on the control head must be pushed on to engage the heading lock. In addition, the turn knob on the control head may be used to make turns up to 28 degrees of bank. Displacing the turn knob automatically disengages the heading lock; after the turn knob is returned to center, the heading lock may be engaged once more and the airplane will return to the heading set on the course selector, or to its reciprocal, whichever is closer.

The tab under the turn knob can be moved left or right to change the roll zero point up to two degrees, if necessary, to trim out torque effects and prevent hunting. Move the tab until the course selector card and directional gyro card are aligned. Changes in power settings may require readjustment of the tab.

The pitch control knob on the right side of the control head may be set to maintain a nose-up or nose-down attitude up to approximately 10 degrees down or 15 degrees up. For best results, the stabilizer should be adjusted with changes in attitude, power or center of gravity, just as you would in manual-control flight. The pitch control unit can overcome an out-oftrim condition, but it may produce oscillations in doings so since there is no automatic trim tab control. Your ride will be smoother if you adjust the trim manually.

EMERGENCY PROCEDURES.

If a malfunction should occur in any of the autopilot units, it can be overridden merely with pressure on the normal flight controls and the entire autopilot may be disengaged by pushing in the master knob. Leaks in the system will produce only a loss of suction. If the suction gage reading falls below 3.5 in. Hg, push in the master knob to disengage the autopilot. All the available suction then will be directed to the instruments.



OPERATING LIMITATIONS

OPERATIONS AUTHORIZED.

Your Cessna 175 with standard equipment as certificated under FAA Type Certificate No. 3A17 is approved for day and night operation under VFR.

Additional optional equipment is available to increase its utility and to make it authorized for use under IFR day and night. An owner of a properly equipped 175 is eligible to obtain approval for its operation on single engine scheduled airline service on VFR.

MANEUVERS - NORMAL CATEGORY.

The Model 175 exceeds the requirements of the Civil Air Regulations, Part 3, set forth by the United States Government for airworthiness. Spins and aerobatic maneuvers are not permitted in normal category airplanes in compliance with these regulations. In connection with the foregoing, the following gross weights and flight load factors apply:

Gross Weight	2350	lbs.
Flight Load Factor* Flaps Up	+3.8	-1.52
Flight Load Factor* Flaps Down	+3.5	
Flight Load Factor Flaps Down.		

*The design load factors are 150% of the above and in all cases the structure meets or exceeds design loads.

Your airplane must be operated in accordance with all FAA approved markings, placards and check lists in the airplane. If there is any information in this section which contradicts the FAA approved markings, placards and check lists, it is to be disregarded.

AIRSPEED LIMITATIONS.

The following are the certificated true indicated airspeed limits for the Cessna 175:

SD2 1/5:	
Maximum (Glide or dive, smooth air)	ne)
Caution Range (Level flight or climb) 140-176 mph (yellow a	ucj
Normal Range (Level flight or climb)62-140 mph (green a	rc)
Transport Langue Court Inglish of the Court	

Flap Operating Range
Power and Speed
ENGINE INSTRUMENT MARKINGS.
OIL TEMPERATURE GAGE.
Normal Operating Range
OIL ! KESSONE STILL
Minimum Idling
*This fuel available for all normal operations Empty (5 gallons unusable each tank)E (red line) *This fuel available for all normal operations
TACHOMETER
Normal Operating Range: At sea level
WEIGHT AND BALANCE.


All aircraft are designed for certain limit loads and balance conditions. These specifications for your 175 are charted on pages 4-3 and 4-4.

A weight and balance report and equipment list for your particular airplane when it left the factory is furnished. Changes in original equipment affecting empty weight c.g. are required by the FAA to be recorded in the repair and alteration form 337. Using the empty weight, c.g. location, and moment derived from the latest of these two sources, and following the example shown, the exact moment may be readily calculated. This exact moment, when plotted on the center of gravity envelope, will quickly show whether or not the c.g. a within timies. Refer to the loading graph for moment values of items to be Chillian


	EXAMPLE PROBLEM FOR AN AIRPLANE WITH WEGST OF USE LES AND A MOMENT OF 12,722 L	i A B-1	LICENSE NS.	D EMPTY	
17. 可持續	A SPORT CHARLES		MO.	MENT	
2573-3Hill	ITEM	11	ĥ. 1	000	
	EMPTY WEIGHT (LICENSED)	1386	+	52.7	
		19		-4	
121	PRIOT & FRONT PASSENGER	340	+	12.2	
11111111111	PHOI & PROPERTY (2)	340	+	23.8	
122222	REAR PANENGER (2) BAGGAGE	26) +	1.9	
	BAGGAGE FUEL TO GROSS WEIGHT (40.8 GAL)	245	+	11.8	
	FUBL 10 GACOS WEIGHT (WOOD OF CO.)	****		102.0	
	Total	2234			
	Locuse this point (2350-102.0) on the center of gravity e	nve	lope graph	, and, since	
*********	lactor this point (2550-100.0) on the center to give meet the point falls within the envelope, the above loading meet the point falls.	is all	balance re	quirements.	
	the brain and				

NOTE

The above problem is an example of only one of many different loading configuramons. To best unifize the available payload for year airplane, the loading charts on page 4.4 should be consulted to determine proper load distribution.

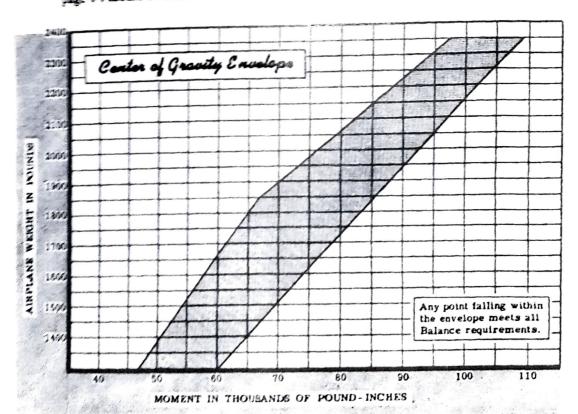

OPERATING LIMITATIONS

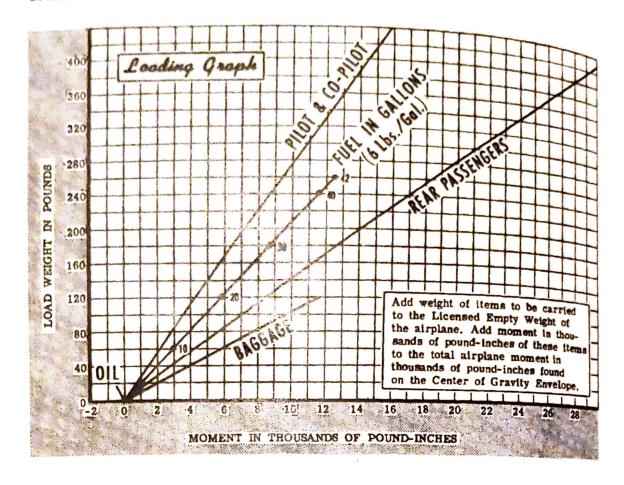

SECTION

CARE OF THE AIRPLANE

IF YOUR AIRPLANE is to retain that new plane performance, stamina, and dependability, certain requirements in its care, inspection, and maintenance must be followed. It is always wise to follow a planned schedule of lubrication and maintenance based on the climatic and flying conditions encountered in your locality.

Keep in touch with your Cessna dealer and take advantage of his knowledge and experience. He knows your airplane and how to maintain it. He will remind you when lubrications and oil changes

are necessary and about other seasonal and periodic services.

GROUND HANDLING.

The airplane is most easily and safely maneuvered by hand with a tow-bar attached to the nose wheel. Always use the tow-bar (optional equipment) when one is available. When moving the airplane by hand, if no tow-bar is available, push down at the front edge of the stabilizer next to the fuselage to raise the nose wheel off the ground. When the nose wheel is held clear of the ground the airplane can be turned readily in any direction by pivoting it about the main gear. Do not push down on the empennage by the tip of the elevator nor shove sidewise on the upper portion of the fin. When moving the airplane forward or backwards, push at the wing strut root fitting or at the main gear strut.

MOORING YOUR AIR-PLANE. (See figure 13.)

Proper tie-down procedure is your best precaution against damage to your parked airplane by gusty or strong winds. To tie down your airplane securely, proceed as follows:

- (1) Tie sufficiently strong ropes or chains (700 pounds tensile strength) to the wing tie-down fittings located at the upper end of each wing strut.
- (2) Secure the opposite ends of these ropes or chains to tiedown rings suitably anchored to the ground.
- (3) Tie a rope or chain thru the nose gear tie-down ring and secure the opposite end to a tie-down ring in the ground.
- (4) Securely tie the middle of a

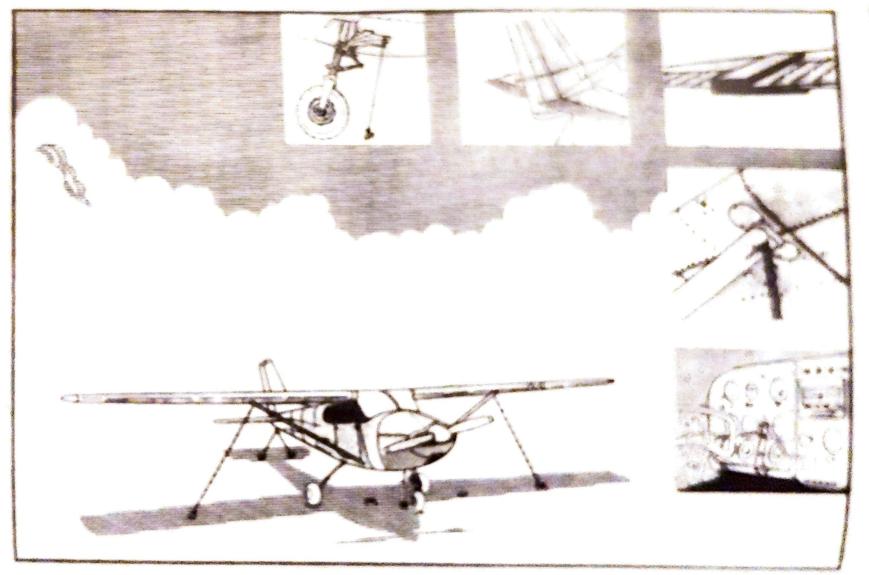


Figure 13. Alephana Tim Dawn Headadura

length of rope to ring at tail.
Pull each end of rope away at
45° angle and secure to tiedown rings positioned on each
side of tail.

(5) Install surface control locks between the flap and aileron of each wing.

(6) Install controls lock on pilot's control column, or if controls lock is not available, tie pilot's control wheel back with front seat belt.

(7) Install surface control lock over fin and rudder.

STORAGE.

The all-metal construction of your Cessna makes outside storage practical, although inside storage will increase its life just as inside storage does for your car. If an airplane must remain inactive for a time, cleanliness is probably the most important consideration, whether your airplane is inside or outside. A small investment in cleanliness will repay you many times in not only keeping your airplane looking like new but in keeping it new. Later paragraphs in this section cover the subject in greater detail.

Do not neglect the engine when storing the airplane. Turn it over by hand or have it turned over every few days to keep the bearings, cylinder walls, and internal parts lubricated. Full tanks will help prevent condensation and will increase fuel tank life.

Using airplanes regularly tends to keep them in good condition. An airplane left standing idle for any great length of time is likely to deteriorate more rapidly than if it is flown regularly, and it should be checked over carefully before being put back into service.

LIFTING AND JACKING.

Your Cessna Dealer has special hoisting rings and jack point brackets, to jack your Cessna properly. Do not use the brake casting as a jacking point.

WHEEL ALIGNMENT.

The wheel alignment has been properly set at the factory. Excessive or uneven tire wear indicates an improper wheel setting for the "on the ground" weight at which you are operating. See your Cessna Dealer for realignment.

INTERIOR CARE.

To remove dust and loose dirt from the upholstery and carpet, clean the interior regularly with a vacuum cleaner.

Blot up any spilled liquid promptly, with cleansing tissue or rags. Don't pat the spot — press the blotting material firmly and hold it for several seconds. Continue blotting until no more liquid is taken up. Scrape off sticky materials with a dull knife, then spot-clean the area.

Oily spots may be cleaned with household spot removers, used sparingly. Before using any solvent, read the instructions on the container and test it on an obscure place in the fabric to be cleaned. Never saturate the fabric with a volatile solvent; it may damage the padding and backing materials.

Soiled upholstery and carpet may be cleaned with a foam-type detergent, used according to the manufacturer's instructions. Keep the foam as dry as possible and remove it with a vacuum cleaner, to minimize wetting the fabric.

The plastic trim, instrument panel and control knobs need only be wiped off with a damp cloth. Never use a volatile solvent on plastic.

WINDSHIELD AND WINDOWS.

The windshield is a single, full-floating unit of free-blown "Longlife" plastic. To clean and prevent scratches and crazing, wash the windshield and plastic windows carefully with plenty of soap and water, using the palm of the hand to feel and dislodge dirt and mud. A soft cloth, chamois or sponge may be used, but only to carry water to the surface. Rinse thoroughly, then dry with a clean, moist chamois.

Rubbing the surface of the plastic builds up an electrostatic charge so that it attracts dust particles in the air. Wiping it with a moist chamois will remove both the dust and this charge.

Remove oil and grease with a cloth moistened with kerosene. Never use gasoline, benzene, alcohol, acetone, carbon tetrachloride, fire extinguisher or anti-ice fluid, lacquer thinner or glass cleaner. These materials will soften the plastic and may cause it to craze. After removing dirt and grease, if the surface is not seriously scratched it should be waxed with a good grade of commercial wax. The wax will fill in minor scratches and help prevent further scratching. Apply a thin, even coat of wax and bring it to a high polish by rubbing lightly with a clean, dry, soft flannel cloth. Do not use a power buffer; the heat generated by the buffing pad will soften the plastic.

Do not use a canvas cover on the windshield unless freezing rain or sleet is anticipated. Canvas covers may scratch the plastic.

ALUMINUM SURFACES.

The clad aluminum surfaces of your Cessna require only a minimum of care to keep them bright and clean. The airplane may be washed with clear water to remove dirt; oil and grease may be removed with gasoline, naphtha, carbon tetrachloride or other nonalkaline solvents. While household detergent soap powders are effective, they should be used cautiously since some are strongly alkaline and may attack the aluminum.

Dulled aluminum surfaces may be cleaned effectively with a mixture of about two quarts of denatured alcohol, two quarts of water and a package of powdered Bon Ami.

PAINTED SURFACES.

With only a minimum of care, the lacquered exterior of your Cessna will retain its brilliant gloss and rich color for many years. The lacquer should

not be waxed or polished for approximately 30 days after it is applied, so that any solvent remaining in the paint may escape. After this initial curing period, regular waxing with a good automotive wax helps preserve the lacquer's luster and affords a measure of protection from damage.

Fluids containing dyes, such as fuel and hydraulic oil, if accidentally spilled on the surface should be flushed away at once to avoid a permanent stain. Battery electrolyte must be flushed off at once, and the area neutralized with an alkali such as baking soda solution, followed by a thorough rinse with clear water.

METAL PROPELLER.

Little maintenance is required to keep your metal propeller in airworthy condition. The blades should be thoroughly inspected at least every 25 hours for dents, nicks and scratches. When small dents and nicks appear, they should be carefully dished and shallowed out using a fine-cut file, sandpaper and crocus cloth. An occasional wiping of the metal propeller with an oily cloth will remove grass and bug stains and assist materially in corrosion-proofing in salt water areas.

LUBRICATION AND SERVICING.

Specific lubrication and servicing points, intervals and specifications are shown on figure 14. In addition, all pulleys, the trim tab actuator rod, control surface hinge bearings, bell-

crank clevis bolts, flap actuating handle, brake pedal pivots, rudder pedal crossbars, shimmy dampener pivot bushings, door hinges and latches, Bowden controls, throttle and control rod universal (if unsealed), should be lubricated with SAE 20 General Purpose oil every 1,000 hours or oftener as required.


In general, roller chains (aileron, tab wheel, tab actuator) and control cables tend to collect dust, sand and grit when they are greased or oiled. Except under seacoast conditions, more satisfactory operation results when the chains are wiped clean occasionally with a dry cloth.

NOSE GEAR SHOCK STRUT.

The nose gear shock strut should be kept clean, filled with fluid and correctly inflated. The exposed portion of the strut piston, particularly, should be wiped off with a cloth moistened in hydraulic fluid, to remove dust and grit which may cut the O-ring seals in the strut barrel.

Inflation of the nose strut should be checked whenever tire pressures are checked. The fluid level should be checked on periodic inspections, and oftener if there is evidence of leakage on the piston or around the filler valve. If the leakage is appreciable or persistent, the strut should be serviced and repaired as necessary by your Cessna Dealer.

To check the strut inflation, jack the nose or lower the tail until the strut is fully extended and the wheel is clear of the ground. Remove the

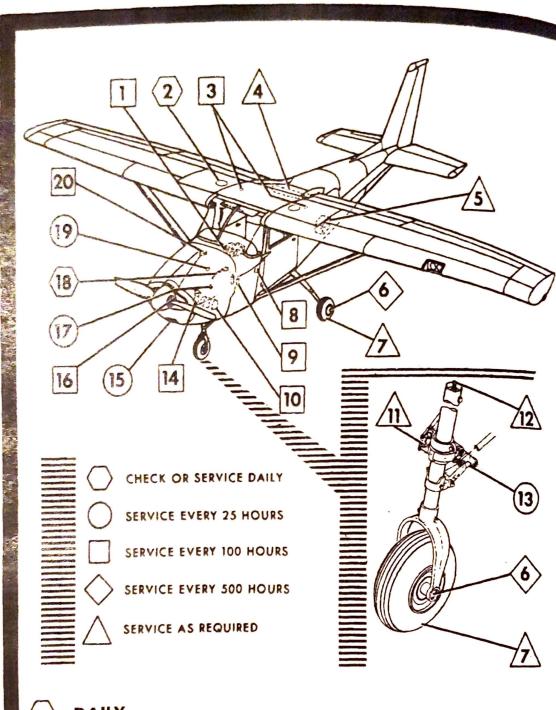

FUEL TANK FILLERS (2) - Service after each flight with 80/87 octane aviation grade fuel. Tank

capacity is 26 gallons each.

OIL FILLER AND DIPSTICK (18) — Maintain oil level at 6 quarts or more; fill if extended flight is planned. Use aircraft grade engine oil, SAE 40 above 50° F and SAE 20 below 50° F.

25 HOURS GEAR TORQUE LINKS (13) - Lubricate through pressure gun fittings with MILL-7711

CARBURETOR AIR FILTER (15) — At least every 25 hours, oftener under dusty conditions, service the filter in accordance with the instructions stamped on the filter frame. In extremely dusty con-

ditions, daily servicing may be necessary.

OR SUMP (17) — Remove lower cowling and carburetor air box. Drain oil by removing plug in sump. OIL SUME SCREEN (19) — At each engine oil change, remove the screen and wash it in Stoddard solvent, then blow dry and replace.

100 HOURS

INSTRUMENT AIR FILTERS (1) - Install new filters. Erratic or sluggish instrument responses with normal suction gage readings indicate clogged filters.

FUEL TANK SUMP DRAINS (3) - Remove the drain plugs, drain off water and sediment. Safery the

drain plugs to the wing structure. FUEL LINE DRAIN (2) - Remove the plug, draw off water and sediment. Safety the plug to the fuse-

lage structure. BRAKE MASTER CYLINDERS (9) - Fill with MIL-H-5606 (red) hydraulic fluid. Filling with a pressure pot connected to the wheel cylinder bleeder ports is preferred, but fluid may be added

through the plugs in the tops of the master cylinders. Oil FILTER (10) - Replace the optional filter whenever oil on the dipstick appears dirty, at least each

100 hours under average conditions.

FUEL STRAINER AND DRAIN VALVE (14) - Drain at least two ounces, to remove water and sediment. Each 100 hours, disassemble and clean the screen and bowl.

SUCTION RELIEF VALVE (16) - Check the screen for dirt and obstructions; remove and wash it in Stoddard solvent. A clogged screen will give high suction gage readings.

OIL SEPARATOR (20) - Remove, wash in Stoddard solvent and blow dry with low-pressure air.

500 HOURS

WHEEL BEARINGS (6) - Repack with MIL-L-3545 wheel bearing grease at least every 500 hours; oftener if more than the usual amount of water, mud, or slush is encountered.

AS REQUIRED

OXYGEN CYLINDER (4) - Check gage pressure, fill with aviator's breathing oxygen, Federal Spec. No. BB-0-925, 25 required for the anticipated flight. See the Oxygen Duration Table, page 3-9. Maximum pressure is 1800 psi.

BATTERY (5) - Check the electrolyte level at least every 30 days; oftener in hot weather. Maintain the level by adding distilled water. DO NOT overfill. Immediately neutralize spilled electrolyte with baking soda solution, then flush away with water. Keep battery clean and connections tight. Neutralize corrosion deposits with baking soda solution, then rinse thoroughly.

TIRES (7) - Maintain 26 psi pressure on the nosewheel tire and 23 psi pressure on the main wheel tires. Inflate with the needle stowed in the map compartment, following instructions on the needle container. Remove oil and grease from the tires with soap and water, periodically inspect them for cuts, bruises and wear.

SHIMMY DAMPENER (11) - Fill with MIL-H-5606 (red) hydraulic fluid through the plug on top

NOSE GEAR SHOCK STRUT (12) - Service in accordance with instructions on page 5-5.

cap on the filler valve and check the pressure with a tire gage, adding or removing air as necessary to obtain 35 psi. Air may be bled out by depressing the stem of the valve core.

Use the following procedure for checking the strut fluid level:

- (1) Working through the left cowl access door, remove the valve cap and depress the valve core stem to release all air pressure.
- (2) Using a 3/4-inch box-end or deep-socket wrench, unscrew the filler valve and remove it.
- (3) Completely compress the strut, so the stops contact the outer barrel. The fluid level should be even with the bottom of the valve hole. If it is not, add MIL-H-5606 (red) hydraulic fluid.
- (4) Completely extend the strut and replace the filler valve.
- (5) With the strut fully extended and the wheel clear of the ground, inflate the strut to 35 psi. Replace the valve cap.

AIRPLANE FILE.

There are miscellaneous data, information and licenses that are a part of the airplane file. The following is a check list for that file. In addition, a check should be made of the latest Civil Air Regulations to insure that all data requirements are met.

- A. To be carried in the airplane at all times:
 - (1) Aircraft Registration Certificate (Form ACA 500A).

- (2) Aircraft Airworthiness Co. tificate (Form ACA 1362)
- (3) Airplane Radio Station I. cense (if transmitter is in.
- (4) Airplane Log Book.
- (5) Engine Log Book.
- B. To be maintained but not neces. sarily carried in the airplane a
 - (1) Weight and Balance report or latest copy of the Repair and Alteration Form 337.
 - (2) Equipment List.
 - (3) A form containing the fol. lowing information: Model, Registration Num. ber, Factory Serial Number, Engine Number and Key Numbers (duplicate keys are available through your Cessna dealer).

Most of the requirements listed under items A and B, are requirements of the United States Civil Air Regu. lations. Since the requirements of other nations may differ from this list, owners of airplanes registered in other countries should check with their own aviation officials to determine their individual requirements.

INSPECTION.

With your airplane you will receive an Owner's Service Policy. This policy has coupons attached to it which entitle you to a no-charge initial inspection and a no-charge 100 hour inspection. If you take delivery from your Dealer, he will perform the initial inspection before delivery of the air-

plane to you. If you pick up the airplane at the factory, plan to take your Cessna 175 to your Dealer reasonably soon after you take delivery on it. This will permit him to check it over and to make any other minor adjust. ments that may appear necessary. Also plan an inspection by your Dealer at 100 hours or 90 days whichever comes first. This inspection also is performed by your Dealer for you at no charge. While these important inspections will be performed for you by any Cessna Dealer, in most cases you will prefer to have the Dealer from whom you purchase the airplane accomplish this work for you.

The Civil Air Regulations require all airplanes to have a periodic (annual) inspection as prescribed by the administrator, by a person designated by the administrator, and in addition, 100 hour periodic inspections made by an "appropriately rated mechanic" if the airplane is flown for hire. The Cessna Aircraft Company recommends the 100 hour periodic inspection for Model 175 airplanes. The procedure for this 100 hour inspection has been carefully worked out by the factory and is followed by the Cessna Dealer organization. The complete familiarity of the Cessna Dealer organization with Cessna equipment and with Cessna procedures provides the highest type of service possible at lowest cost.

Time studies of the 100 hour inspection at the factory and in the field have developed a standard flat rate charge for this inspection at any Cessna Dealer. Points which the inspection reveals require modification or repairs will be brought to the owner's attention by the Dealer and quotations or charges will be made accordingly. The inspection charge does not include the oil required for the oil change.

best mechanics in each community to Cessna service facilities. Many Dealers' mechanics have attended Cessna Aircraft Company schools and have received specialized instruction in maintenance and care of Cessna airplanes. Cessna service instruction activity in the form of service bulletins and letters is constantly being carried on so that when you have your Cessna inspected and serviced by Cessna Dealers' mechanics, the work will be complete and done in accordance with the latest approved methods.

Cessna Dealers maintain stocks of genuine Cessna parts and service facilities consistent with the demand.

Your Cessna Dealer will be glad to give you current price quotations on all parts that you might need and advise you on the practicability of parts replacement versus repairs that from time to time might be necessary.

DEALER FOLLOW-UP SYSTEM.

Your Cessna Dealer has an owner follow-up system to notify you when he receives information that applies to your Cessna. In addition, if you wish, you may choose to receive similar notification directly from the Cessna Service Department. A subscription card is supplied in your airplane file for your use, should you choose to request this service. Your Cessna Dealer will be glad to supply you with details concerning these follow-up programs, and stands ready through his Service Department to supply you with fast, efficient, low cost service.

SECTION VI OPERATIONAL DATA

THE OPERATIONAL DATA shown on the following pages are compiled from actual tests with airplane and engine in good condition and using average piloting technique and best power mixture. You will find this data a valuable aid when planning your flights. However, inasmuch as the number of variables included precludes great accuracy, an ample fuel reserve should be provided. The range performance shown makes no allowance for wind, navigational error, pilot technique, warm-up, take-off, climb, etc. All of these factors must be considered when estimating reserve fuel.

To realize the maximum usefulness from your 175, take advantage of the high cruising speeds. However, if range is of primary importance, it may pay you to fly at a low cruising rpm thereby increasing your range and allowing you to make the trip non-stop with ample fuel reserve. Use the range tables on

pages 6-3 and 6-4 to solve flight planning problems of this nature.

In the tables, range and endurance are given for lean mixture, from 2500 feet to 12,500 feet and for rich mixture at altitudes of 2,500 feet and 5,000 feet. All figures are based on zero wind, 42 gallons of fuel for cruise, McCauley 8467 propeller, 2350 pounds gross weight, and standard atmospheric conditions. For lean mixture figures, mixture is leaned to maximim rpm. Allowances for fuel reserve, headwinds, take-offs and climb, and variations in mixture leaning technique should be made and are in addition to those shown on the charts. Other indeterminate variables such as carburetor metering-characteristics, engine and propeller conditions, and turbulence of the atmosphere may account for variations of 10% or more in maximum range.

175		AU	spe	ed	Co	rrec	tion	17	able	2	17	91
				— F	LAP	SU	P-	-		1		
IAS	40	50	60	70	80	90	100	110	120	130	140	150
TIAS	57	61	67	74	83	91	100	110	119	128	137	146
,				·FL	APS	DO	WN					
IAS	40	50	60	70	80	90	100					
TIAS	52	58	65	74	83	92	101					

Figure 15. Airspeed Correction Table

TAKE-OFF DATA

TAKE-OFF DISTANCE WITH FLAPS 20° PROM HARD SURFACE BUNWAY

Company of the second second	24,21.4					***********	A CONTRACTOR			
GROSS	IAS	HEAD	AT S.	L. & 50°F	A9 2500	FT. & 50°F	AT 5000 FT. & 41°F		AT 7500	FT. & 32°F
WEIGHT AT 50 FT. LBS. MPH	AT 50 FT. MPH	WIND MPH	GROUND RUN	TO CLEAR 50 FT. ODS.	GROUND RUN	TO CLEAR 50 FT. OBS.	GROUND RUN	TO CLEAR 50 FT. OBS.	GROUND	TO CLEAR 50 FT, OBS.
1700	51	0 15 30	345 180 65	680 420 210	610 220 85	805 505 265	490 265 110	940 600 320	595 335 145	1130 735 405
2000	55	0 15 30	495 270 110	950 625 330	595 335 145	1120 725 405	715 410 185	1330 880 505	870 515 245	1560 1045 615
2350	60	0 15 30	735 420 190	1340 875 535	875 515 245	1595 1065 630	1040 630 315	1980 1345 820	1295 800 415	2570 1720 1090

Note.... INCREASE DISTANCES 10% FOR EACH 25° F ABOVE STANDARD TEMPERATURE FOR PARTICULAR ALTITUDE.

CLIMB DATA

) -	- 4 10	-	- State of the last	
	AT	S. L. & 59°	F	AT :	5000 FT. &	41°F	AT 1	0000 FT. 8	23°F	AT	15000 FT.	& 5°F
GROSS WEIGHT LBS.	BEST CLIMB IAS MPH	RATE OF CLIMB FT/MIN	GALS OF FUEL USED	BEST CLIMB IAS MPH	RATE OF CLIMB FT/MIN	FROM S.L. FUEL USED	BEST CLIMB IAS MPH	RATE OF CLIMB FT/MIN	FROM S.L. FUEL USED	BEST CLIMB LAS MPH	RATE OF CLIMB FT/MIN	FROM S.L. FUEL USED
1700	75	1395	1. 2	72	1090	1.9	70	790	2.7	58	475	3.7
2000	79	1105	1.2	77	840	2, 2	75	575	3. 2	73	310	4. 6
2350	84	850	1.2	82	815	2. 5	80	380	4.1	79	140	6.8
Note.	FLAPS	UP, FULL SES WARM-	THROTTLE UP AND TA	KE-OFF A	E LEANED	FOR SMOO	TH ENGINE	OPERATIO	N ABOVE 5	,000 FT.	FUEL USEL	,

Figure 16. Take-Off and Climb Chart

	or the same of the					the same of the sa	The state of the s	
ALT RPM BHP TAS Hoar Hoar Gal. Miles 2500 3000 74 135 12.0 3.5 11.3 473 2800 60 125 9.7 4.3 12.9 370 2800 60 125 9.7 4.8 13.7 540 2800 48 114 7.8 5.4 14.6 13.7 540 2800 43 108 7.1 5.9 15.2 615 2800 43 108 7.1 5.9 15.2 615 2800 69 135 11.6 3.6 11.6 12.5 95 2800 56 124 9.3 4.5 11.2 12.5 522 2800 56 124 9.3 4.5 11.3 2.5 50 2800 45 113 7.6 5.5 14.9 665 2800 45 113 7.6 5.5 14.9 665 2800 45 113 7.6 5.5 14.9 665 2800 45 113 7.6 5.5 14.9 665 2800 65 124 9.3 4.5 13.3 660 2800 67 128 119 8.0 5.3 11.5 7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 9.3 16.7 665 2800 65 124 113 7.6 5.5 14.9 665 2800 67 135 113 7.6 5.5 14.9 665 2800 67 125 8.8 4.4 13.5 570 2800 67 130 9.6 4.4 13.5 570 2800 69 125 8.8 4.4 13.5 570 2800 69 125 8.8 4.4 11.1 15.6 665 2800 45 113 7.0 6.0 12.7 755 2800 45 113 7.0 6.0 16.6 670 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 125 8.8 6.7 6.3 16.1 660 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 6.2 129 9.0 4.7 14.3 500 2800 69 135 9.9 6.2 129 9.0 4.7 14.3 500 2800 69 135 9.9 6.2 129 9.0 4.7 14.3 500 2800 69 135 9.9 6.2 129 9.0 4.7 14.3 500 2800 69 135 9.9 6.2 129 9.0 6.8 16.1 17.0 17.0 17.0 17.0 17.0 17.0 17.0 17	Stande	rd Atmosphe	ric Condition 150 paunds	RICH M	AIXTURE	Zero 42	Wind	
ALT RPM BBP TAS Hour Hours Gal. Range 2500 3000 74 135 12.0 3.5 11.3 475 2800 60 125 9.7 4.3 11.2 9 595 2800 60 125 9.7 4.3 11.3 12.9 595 2800 48 114 7.8 5.4 115.7 575 2800 43 108 7.1 5.9 15.2 640 38 103 6.5 6.5 15.9 665 2800 69 135 11.6 3.6 11.6 490 2800 62 129 10.3 4.5 11.6 490 2800 65 124 9.3 4.5 11.6 490 2800 65 124 9.3 4.5 11.5 260 2800 45 113 7.6 5.5 14.9 625 2800 45 113 7.6 5.5 14.9 625 2800 45 113 7.6 5.5 14.9 625 2800 60 125 8.8 4.8 11.5 7.660 2400 38 103 6.3 6.7 16.3 685 2800 60 125 8.8 4.8 14.2 595 2800 60 125 8.8 4.8 14.2 595 2800 60 125 8.8 4.8 14.2 595 2800 60 125 8.8 4.8 14.2 595 2800 60 125 8.8 4.8 14.2 595 2800 60 125 8.8 8.8 4.8 14.2 595 2800 60 125 8.8 8.8 4.8 14.2 595 2800 60 125 8.8 8.8 4.8 14.2 595 2800 60 125 8.8 8.8 4.8 14.2 595 2800 69 135 9.6 4.4 11.1 13.3 560 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 570 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 2800 69 135 9.9 4.2 13.6 670 18.5 50 18.5 655 124 8.3 5.1 15.0 630 2800 69 135 9.9 4.2 13.6 670 18.5 50 18.5 655 124 8.3 5.1 15.0 630 18.5 50 18.5 655 124 8.3 5.1 15.0 630 18.5 50 18.5 655 124 8.3 5.1 15.0 630 18.5 50 18.5 655 124 8.3 5.1 15.0 630 18.5 50 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.3 5.1 15.0 630 18.5 655 124 8.5 5.5 14.9 15.1 6.5 500 18.5 655 124 8.5 5.5 14.9 15.1 6.5 500 18.5 60 18.5 60 18.5 60 18.5 60 18.5 60 18.5 60 18.5 60 18.5 60	Gib	Name and Address of the Owner, where the Owner, which is the Owner, which is the Owner, where the Owner, which is the Owner,	9,		Gal./	Pad		Fuel
2500 67 130 10.8 3.9 11.3 475 2800 60 125 9.7 4.3 12.0 506 2800 48 114 7.8 5.4 11.1 12.0 506 2800 48 114 7.8 5.4 11.1 11.7 575 2800 48 114 7.8 5.4 11.6 615 2800 48 103 6.5 6.5 15.9 665 2800 50 72 137 12.3 3.4 11.1 12.5 502 2800 69 135 11.6 3.6 11.6 470 2800 69 135 11.6 3.6 11.6 470 2800 55 124 9.3 4.5 13.3 565 2800 56 124 9.3 4.5 13.3 555 2800 40 108 6.9 6.1 15.7 660 2800 40 108 6.9 6.1 15.7 660 2800 60 125 8.8 4.8 14.2 595 2800 50 125 8.8 4.8 14.2 595 2800 50 125 8.8 4.8 14.2 595 2800 50 125 8.8 4.8 14.2 595 2800 50 135 10.6 6.7 6.3 15.6 655 2800 40 108 6.7 6.3 15.6 655 2800 50 125 8.8 4.8 14.2 595 2800 50 125 8.8 4.8 14.2 595 2800 50 125 8.8 4.8 14.2 595 2800 40 108 6.7 6.3 15.6 655 2800 40 108 6.7 6.3 15.6 655 2800 40 108 6.7 6.3 15.6 655 2800 40 108 6.7 6.3 15.1 6.6 2800 50 125 8.8 4.8 14.2 595 2800 40 108 6.7 6.3 15.1 650 2800 50 125 8.8 4.8 14.2 595 2800 50 135 9.9 4.7 14.3 600 2800 50 135 9.9 4.7 14.3 600 2800 50 135 9.9 4.7 14.3 600 2800 50 136 6.3 5.5 15.5 655 2800 40 103 5.8 7.2 17.8 745 2800 50 126 7.5 6.0 6.4 7.0 7.0 2800 50 128 7.8 5.4 15.5 655 2800 40 108 6.3 6.7 7.0 7.0 2800 50 126 7.5 6.0 6.1 7.0 7.0 2800 50 126 7.5 6.0 6.1 7.0 2800 50 126 7.5 6.0 6.1 7.0 2800 50 126 7.5 5.6 6.8 7.2 2800 50 126 7.5 5.6 6.8 7.2 2800 50 126 7.5 5.6 6.8 7.2 2800 50 126 7.5 5.6 6.0 6.0 7.5 2800 40 100 5.8 7.2 7.8 2800 40 100 5.8 7.2 7.8 2800 40 100 5.8 7.2 7.8	ALT	RPM		TAS				Range Miles
2800 60 125 9.7 4.3 12.0 505	0500						11.3	107
2700	2000	-						100000
2000 48 114 7.8 5.4 11.7 578 570 2500 43 108 7.1 5.9 15.2 640 38 103 6.5 6.5 15.9 665 655 15.9 665 665 15.9 665 665 15.9 665 665 15.9 665 665 15.9 665 665 15.9 665 665 15.9 665 15.9 665 15.9 665 15.9 665 124 9.3 4.1 12.5 525 2800 56 124 9.3 4.5 13.3 560 2800 45 113 7.6 5.5 14.9 602 2800 45 113 7.6 5.5 14.9 602 2800 45 113 7.6 5.5 14.9 625 685				0.57 (2.57)		22.00	12.9	
2500	1			100070000				1
2400 38	1			1000000				1
13050 72					200 19			
South Sout		2050	70	137	12.2	2.4		065
2000 56	5000							470
2800 56	- 1					8.4 (5)		
Table Tabl	- 1			7				
Table Tabl				118				
TAS	1		45	113				
LEAN MIXTURE	1		40	108	6.9	The second secon		
ALT RPM BET TAS Hour Hours Gal. Mil. Miles	- 1	_	38 7	103	6.3	6.7		
ALT RPM BET TAS Gal./ Hour Hours Gal. Miles 2500 3000 74 135 10.6 4.0 12.7 535 2800 67 130 9.6 4.4 133.5 570 2800 60 125 8.8 4.8 14.2 595 2700 54 119 8.0 5.3 14.9 625 2800 43 108 6.7 6.3 15.6 655 2500 43 108 6.7 6.3 16.1 680 2400 38 103 6.2 6.8 16.6 700 5000 3050 72 137 10.3 4.1 13.3 560 3000 69 135 9.9 4.2 13.6 570 2800 56 124 8.3 5.1 15.0 630 2800 56 124 8.3 5.1 15.0 630 2800 56 124 8.3 5.1 15.0 630 2800 45 113 7.0 5.0 16.2 680 2500 45 113 7.0 5.0 16.2 680 2500 40 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2900 57 128 8.5 4.9 15.1 635 2700 47 117 7.0 6.0 16.2 680 2900 57 128 8.5 4.9 15.1 635 2700 47 117 7.0 6.0 16.7 705 2800 56 123 7.8 5.4 15.8 685 2700 47 117 7.0 6.0 16.7 705 2800 56 124 8.3 5.1 17.0 6.0 16.2 680 2500 40 103 5.8 7.2 17.8 745	1		200				10.0	000
ALT RPM B7 TAS Hour Hours Gal. Miles 2500 3000 87 130 10.6 4.0 12.7 535 2800 60 125 8.8 4.4 13.5 570 2800 60 125 8.0 4.4 13.5 570 2800 40 119 8.0 5.3 14.9 625 2800 40 1108 6.7 6.3 16.1 680 2400 38 103 6.2 6.8 16.6 700 5000 3050 72 137 10.3 4.1 13.3 580 2900 62 129 9.0 4.7 14.3 600 2900 62 129 9.0 4.7 14.3 600 2700 50 118 7.6 5.5 15.5 655 2800 45 113 7.0 6.0 16.2 680 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2500 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2800 52 123 7.8 5.4 15.8 655 2800 52 123 7.8 5.4 15.8 585 2800 52 123 7.8 5.4 15.8 655 2800 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3200 59 132 8.6 4.9 15.4 645 3200 59 132 8.6 4.9 15.4 645 3200 59 132 8.6 4.9 15.4 645 3200 59 132 8.6 4.9 15.4 645 3200 44 117 6.9 6.1 17.0 715 2800 44 117 6.9 6.1 17.0 715 2800 44 117 6.9 6.1 17.0 715 2800 44 117 6.9 6.1 17.0 715 2800 48 122 7.3 5.8 16.7 705 2800 40 111 6.2 6.8 17.9 750 2800 40 111 6.2 6.8 17.9 750 2800 40 111 6.2 6.8 17.9 750 2800 40 111 6.2 6.8 17.9 750 2800 40 111 6.2 6.8 17.9 750 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755 2800 45 121 6.4 6.6 6.8 18.0 755			The second secon	LEAN M	Name and Address of the Owner, where			
2900 67	ALT	RPM		TAS		4		
2900 67		2000	76	135	10, 6	4.0	12, 7	535
2800	2500				9.6	4.4	13.5	570
\$\begin{array}{c c c c c c c c c c c c c c c c c c c	1			125	8.8	4.8	14.2	595
2800	- 1		54	119	8.0	5. 3		
2400 38	1		48			(A) (A) (A)		
5000 3050 72 137 10.3 4.1 13.3 560 3000 69 135 9.9 4.2 13.6 570 2900 62 129 9.0 4.7 14.3 600 2800 56 124 8.3 5.1 15.0 630 2700 50 118 7.6 5.5 15.5 655 2600 45 113 7.0 6.0 16.2 680 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 52 123 7.8 5.4 9 15.1 635 2800 52 123 7.8 5.4 9 15.1 635 2800 52 123 7.8 5.4 15.8 655 2700 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3000 59 132 8.6 6.9 7.0 17.8 750 15.9 665 127 700 44 117 6.9 6.1 17.0 715 2600 48 122 7.3 5.8 16.7 705 15.9 665 2800 48 122 7.3 5.8 16.7 705 2600 44 117 6.9 6.1 17.0 715 2600 44 117 6.9 6.1 17.0 715 2600 48 122 7.3 5.8 16.7 705 15.9 665 2800 48 122 7.3 5.8 16.7 705 15.9 665 2800 48 122 7.3 5.8 16.7 705 15.9 665 2800 48 122 7.3 5.8 16.7 705 2600 40 111 6.2 6.8 17.0 715 2600 40 111 6.2 6.8 17.0 715 2600 40 111 6.2 6.8 17.0 715 2600 40 111 6.2 6.8 17.0 715 2600 40 111 6.2 6.8 17.0 715 2600 40 111 6.2 6.8 17.0 715 2600 40 111 6.2 6.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 16.8 7.2 18.3 770 126 126 7.5 5.6 16.8 7.2 18.3 770 126 126 7.5 5.6 16.8 7.2 18.3 770 126 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 18.0 755 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.6 18.0 755 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.6 18.0 755 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 18.3 770 125 126 7.5 5.6 16.8 7.2 125 125 7.0 126 7.5 5.8 126 7.5 5.6 16.8 7.2 126	1							
3000 69 135 9,9 4.2 13.6 570 2900 62 129 9.0 4.7 14.3 600 2800 56 124 8.3 5.1 15.0 630 2700 50 118 7.6 5.5 15.5 655 2600 45 113 7.0 5.0 16.2 680 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2400 57 128 8.5 4.9 15.1 635 2800 52 123 7.8 5.4 15.8 665 2700 47 117 7.0 6.0 16.7 705 2800 42 112 6.6 6.4 17.0 715		2400	38				7	
2900 62 129 9.0 4.7 14.3 500	5000							
2800 56 124 8.3 5.1 15.0 630 2700 50 118 7.6 5.5 15.5 655 2600 45 113 7.0 6.0 16.2 680 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2900 57 128 8.5 4.9 15.1 635 2800 52 123 7.8 5.4 15.8 665 2700 47 1117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2800 48 122 7.3 5.8 16.7 705 2800 48 122 7.3 5.8 16.7 705 2800 48 122 7.3 5.8 16.7 705 2800 40 111 6.2 6.8 17.9 750 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770								
2700 50 118 7.6 5.5 15.5 655 2600 45 113 7.0 6.0 16.2 680 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 2900 57 128 8.5 4.9 15.1 635 2800 52 123 7.8 5.4 15.8 665 2700 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3000 59 132 8.6 4.9 15.4 645 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2900 53 127 8.0 5.3 15.9 665 2900 53 127 8.0 5.3 15.9 665 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2800 44 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 59 131 8.1 5.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 44 1115 6.4 6.6 18.0 755 2800 44 115 6.4 6.6 18.0 755							A CONTRACTOR OF THE PARTY OF TH	and the second
2600 45 113 7.0 6.0 16.2 680 2500 40 108 6.3 6.7 17.2 720 2400 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 3000 64 133 9.2 4.6 14.5 610 2900 57 128 8.5 4.9 15.1 635 2800 52 123 7.8 5.4 15.8 665 2700 47 1117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3100 65 138 9.4 4.5 14.7 620 3100 65 138 9.4 4.5 15.4 645 2900 53 127 8.0 5.3 15.9 665 2900 48 122 7.3 5.8 16.7 705 2800 48 122 7.3 5.8 16.7 705 2700 44 1117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2700 45 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 6.8 17.9 750 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.6 6.8 18.0 755 2700 41 115 6.4 6.6 18.0 755				100 to 100				
2500								680
7500 36 103 5.8 7.2 17.8 745 7500 3100 70 139 10.1 4.2 13.8 580 3000 64 133 9.2 4.6 14.5 610 2900 57 128 8.5 4.9 15.1 635 2800 52 123 7.8 5.4 15.8 665 2700 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665				PACKET IN		6.7	17.2	720
7500 3100 64 133 9.2 4.6 14.5 610 29900 57 128 8.5 4.9 15.1 635 2800 52 123 7.8 5.4 15.8 685 2700 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2800 44 117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 46 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725						7.2	17.8	745
10000 3200 71	7500	3100	70	139				
2800 52 123 7.8 5.4 15.8 665 2700 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2800 44 117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 16.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 18.0 755 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725		3000	64					
2700 47 117 7.0 6.0 16.7 705 2600 42 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2800 44 117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 3000 55 131 8.1 5.2 680 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 18.0 755 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 19.5 780		2900	15.00					
2700 47 112 6.6 6.4 17.0 715 2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2800 44 117 6.9 6.1 17.0 715 2700 44 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 16.2 680 3000 55 131 8.1 5.2 16.2 680 7.2 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2800 38 111 6.0 7.0 19.5 780								
2500 38 107 6.0 7.0 17.8 750 10000 3200 71 143 10.2 4.1 14.0 590 3100 65 138 9.4 4.5 14.7 620 3100 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2700 44 117 6.9 6.1 17.0 715 2700 44 117 6.2 6.8 17.9 750 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 16.2 680 3000 55 131 8.1 5.2 680 2900 60 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 41 115 6.4 6.6 18.0 755 2700 41 115 6.4 6.6 18.0 755 2700 31 115 6.4 6.6 18.0 755								
10000 3200 71 138 9.4 4.5 14.7 620 3100 65 138 9.4 4.5 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2700 444 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 55 131 8.1 5.2 18.3 770 12500 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755 780								
3100 65 138 9.4 4.5 14.7 620 3000 59 132 8.6 4.9 15.4 645 2900 53 127 8.0 5.3 15.9 665 2800 48 122 7.3 5.8 16.7 705 2700 44 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 16.2 680 2900 50 126 7.5 5.6 16.8 710 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755	10000	3200	71	143				
130 132 8.6 4.9 15.4 645	10000							
2900 53 127 8.0 5.3 18.5 5.3 18.7 705 18.7 705 705 705 705 705 705 715 705 715 705 715<				132				
2800 48 122 7.3 5.8 16.1 17.0 715 2700 444 117 6.9 6.1 17.0 715 2600 40 111 6.2 6.8 17.9 750 2500 36 106 5.8 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 16.2 680 2900 50 126 7.5 5.6 16.8 710 2900 50 126 7.5 5.6 16.8 710 2900 45 121 7.0 6.0 17.3 725 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755 2700 38 111 6.0 7.0 19.5 780			The same of the sa					
12500		2800						
2600 40 111 6.2 7.2 18.3 770 12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 16.2 680 2900 50 126 7.5 5.6 16.8 710 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755 2600 38 111 6.0 7.0 19.5 780								
12500 3100 60 136 8.8 4.8 15.5 650 3000 55 131 8.1 5.2 16.2 680 2900 50 126 7.5 5.6 16.8 710 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755 2600 38 111 6.0 7.0 19.5 780								
3000 55 131 8.1 5.2 16.2 580 2900 50 126 7.5 5.6 16.8 710 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755 2600 38 111 6.0 7.0 19.5 780	10500		60	136	8.8	4.8		
2900 50 126 7.5 5.6 16.8 710 2800 45 121 7.0 6.0 17.3 725 2700 41 115 6.4 6.6 18.0 755 2600 38 111 6.0 7.0 19.5 780	12500					5. 2		
2800 45 121 7.0 6.0 17.3 125 2700 41 115 6.4 6.6 18.0 755 780 19.5 780								
2700 41 115 6.4 6.6 18.0 7.0 19.5 780								
2600 38 111		2700	41	115				
		2600						

Figure 17. Cruise Performance Chart

			SKIP	LANE		marketon as	•
	COLUE	E PERF	ORMAN	ICE WIT	H RICH	MIXTUR	E
STANDARD	CKUIS	E CONDITI	ONS		0 4 0 3 3	WEIGHT 23	SOLOGIADS
STANDARD	ZERO WIN	D	T	GAL	END. RRS	MILES	RANGE
ALTITUDE	RPM	ВВИР	TAS	PER HR	EAD. Mas	PER GAL	MILES
	3000	74	123 117	12.9 11.5	3.3	9.5 10.2	400 425
2500	2900	67	112	9.8	4.3	11.4	480
i	2800	61 56	107	9.0	4.7	11.9	500
į	2700 2600	51	102	8.2	5.1	12. 4 12. 6	525 530
1	2500	47	96	7.6	5.5 5.9	12.5	525
*	2400	44	89			10.0	420
**200	3050	73	124	12. 4	3.4	10.3	430.
5000	3000	69	121	11.8	4.0	10.9	460
1	2900	63	111	9.6	4.4	11.6	485
	2800	58 53	106	8.8	4.8	12.0	505
1	2700 2600	49	100	8.2	5.1	12.2	515
	2500	46	94	7.6	5.5	12.4	520 455
	2400	43	78	7.2	5.8	10.8	
	CRUIS	E PERF	DRMAN	ICE WIT	H LEAN	MIXTUR	E .
	2000	74	123	10.6	4.0	11.6	490
2500	3000 2900	67	118	9.6	4.4	12.3	515
	2800	61	112	8.8	4.8	12.7	535 550
	2700	56	107	8. 2 7. 6	5. 1 5. 5	13. 1 13. 4	565
	2600	51	96	7, 1	5.9	13.5	570
	2500	47 44	89	6.7	6.3	13.3	560
	2400		124	10.4	4.0	11.9	500
5000	3050	73 69	121	9.9	4.2	12.2	515
	3000 2900	63	116	9.1	4.6	12.7	535
	2800	58	111	8.4	5.0	13. 2	555
	2700	53	106	7.8	5. 4 5. 8	13.6 13.7	570 575
	2600	49	100 94	7.3 6.9	6.1	13.6	570
	2500 2400	46 43	78	6.6	6.4	11.8	495
			125	10.1	4.2	12.4	520
7500	3100	71 65	120	9.3	4.5	12.9	540
	3000 2900	60	115	8.6	4.9	13.4	565
	2800	55	110	8.1	5.2	13.6	570
	2700	51	104	7.6 7.2	5. 5 5. 8	13.7	575 565
	2600 2500	48 45	97 82	6.8	6.2	13.5 12.1	505
		72	129	10. 2	4.1	12.7	530
10000	3200 3100	67	124	9.5	4.4	13.0	550
	3000	61	119	8. 8	4.8	13.5	570
	2900	57	114	8.3	5.1	13.8	580
	2800	53	108	7.8	5.4	13.9	580
	2700 2600	49 47	101 86	7.4 7.1	5.7	13.7	575
	2500	45	72	6.8	5.9 6.2	12.1 10.6	510 445
12500	3100	63	123	9.0	4.7	13. 7	575
, config. 5.1. Shares	3000	58	117	8.5	4.9	13. 8	580
	2900	54 51	111	8.0	5.3	13.9	585
	2800 2700	49	104 88	7.6 7.3	5.5	13. 7	575
	2600	47	74	7.1	5. 8 5. 9	12. 1 10. 4	505
THE RESERVE TO SERVE THE PARTY.			The second second second			10. 4	440

Figure 18. Skiplane Cruise Performance

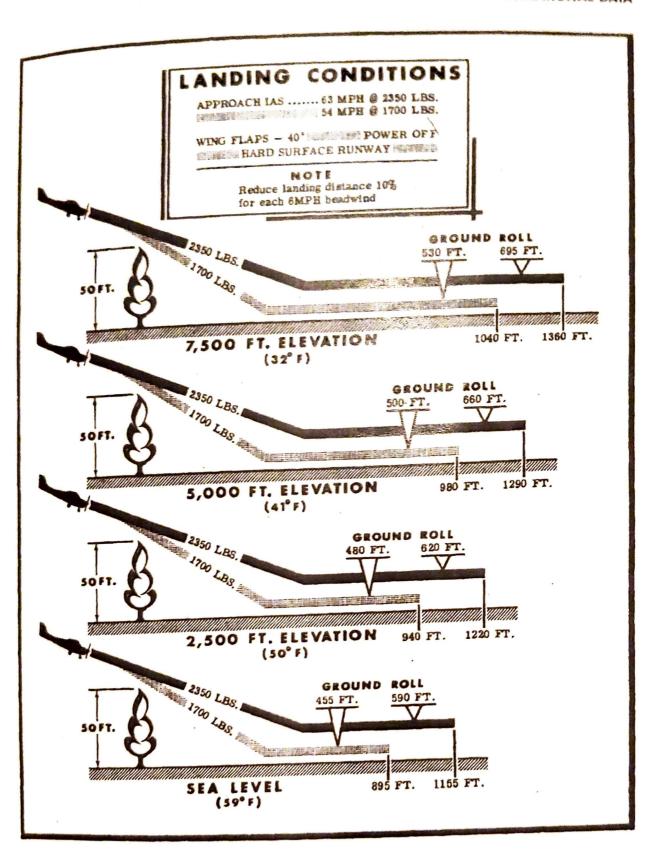


Figure 19. Landing Diagram

ALPHABETICAL INDEX

A

After Landing, 2-6
Air Induction System, 1-5
Airplane File, 5-9
Airplane Tie-Down Procedure, 5-2
Airspeed Correction Table, 6-1
Airspeed Limitations, 4-1
Aluminum Surfaces, 5-4
Ash Receivers, 1-22
Assist Straps, 1-22

B

Baggage Compartment, 1-22
Before Entering The Airplane, 2-1
Before Landing, 2-5
Before Starting The Engine, 2-1
Before Take-Off, 2-3
Brake System, 1-15

C

Cabin Air Knob, 1-2 Cabin Doors, 1-21 Cabin Heat Knob, 1-2 Cabin Ventilators, 1-17 Cabin Windows, 1-21 Carburetor Air Heat Knob, 1-2, 1-3 Carburetor Air Temperature Gage, 1-7 Center of Gravity Envelope, 4-3 Cigarette Lighter, 1-3 Clearing The Propeller, 3-1 Climb, 2-5, 3-5 Clock, 1-17 Coat Hanger Hook, 1-22 Cold Weather Operation, 3-6 Compass Correction Card, iv Controls Lock, 1-11 Copilot's Rudder Pedals, 1-12 Cruise, 3-5 Cruise Performance Chart, 6-3 Cruising, 2-5, 3-2

D

Dome Light, 1-20 Door Handle, 1-21

E

Electric Power Distribution Diagram, 1-10
Electrical System, 1-9
Elevator Tab Control Wheel, 1-12
Emergency Procedures, 3-11
Engine, 1-1
Engine Controls, 1-1
Engine Instrument Markings, 4-2
Engine Operating Limitations, 4-2
Engine Operating Procedure, 3-1
Engine Frimer Knob, 1-3, 1-4
Exterior Inspection Diagram, 2-2

Flight Control System, 1-11
Flight Instrument Grouping, iv
Front Seats, 1-20
Fuel and Oil Instruments, iv
Fuel Line Drain Flug, 1-9
Fuel Quantity Indicators, 1-9, 4-2
Fuel Selector Valve, 1-7
Fuel Specification and Grade, 1-7
Fuel Strainer Drain Knob, iv, 1-9
Fuel System, 1-7
Fuel System Schematic, 1-8
Fuel Tank Sump Drain Plugs, 1-9
Fuses, 1-3, 1-11


G

Generator Warning Light, 1-2, 1-11 Ground Handling, 5-1

H

Headphone Jack, iv Heating and Ventilation System, 1-17

Idling Engine, 3-2 Ignition Switch, 1-3, 1-4 Inspection, 5-10 Instrument Lights, 1-19 Instrument Panel, iv Instruments, 1-16 Interior Care, 5-3

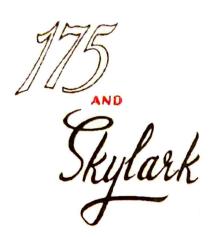

"Look for the red and blue Cassaa Pennants for that extra service where it counts when you need it."

CESSNA AIRCRAFT COMPANY
WICHITA, KANSAS